AK & AX SERIES STEAM GENERATOR GANGING

SPECIFICATION SHEET

Amerec steam generators may be ganged together to supply steam to rooms larger than what a single 14kW unit can accommodate. When ganging generators, only one has a control and temperature sensor connected. Secondary units mimic the primary unit, making the system operation as simple as -controlling a single generator.


- Each steamer requires at least one ComfortFlo steam head (we recommend at least 2 heads for 14kW units) and more steam heads per unit may be desirable to reduce steam noise)
- Each steamer will need its own automatic drain valve kit
- Each steamer will need its own drip pan

Note: You may gang an AK steamer only with other AKs. You may hang an AX steamer only with other AXs.



- Item #5304-031 AK Ganging Cable. One required for each secondary steamer.
- Item #8855-138 AX Ganging Cable. One required for each secondary steamer.

For further information, refer to Amerec doc: 4211-1551 AK Installation Instructions 4211-119 AX Installation Instructions

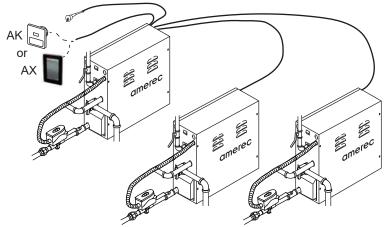

Ganged System Ratings

		Max	Max	Steamer Models Used			
System kW	kW	cu ft	cu m	Qty	Model	Qty	Model
AK/AX 18	18	700	19,8	2	AK/AX 9		
AK/AX 22	22	900	25,5	2	AK/AX 11		
AK/AX 28	28	1100	31,2	2	AK/AX 14		
AK/AX 30	31	1300	36,8	1	AK/AX 9	2	AK/AX 11
AK/AX 36	36	1500	42,5	2	AK/AX 11	1	AK/AX 14
AK/AX 42	42	1800	51,0	3	AK/AX 14		

AMEREC STEAM

P.O. Box 2258 | 17683 128th Place NE, #C | Woodinville, WA 98072, USA Toll-Free 1-800-331-0349

amerec@amerec.com | www.amerec.com



Amerec reserves the right to change specifications and design without notice. © 2019 Amerec Steam