

	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
	This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK, DO NOT OPEN!	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</b>		

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO ALL LOCAL CODES. READ AND FOLLOW THE SAFETY INSTRUCTIONS BEFORE ATTEMPTING THIS INSTALLATION.

**Note to CATV installer.** This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry into the room as practical.

 **WARNING: OXYGEN ENVIRONMENT DO NOT** use in an oxygen tent or oxygen chamber. Such use may cause a fire hazard.


**WARNING:** To avoid the hazards of fire or electric shock, DO NOT expose this TV to rain or moisture.



**DANGER: ARM RECOIL HAZARD** The safety brake pin must remain in the SAFETY BRAKE PIN HOLE whenever the television set is removed from the arm or when the arm is removed from the wall bracket to prevent the arm from springing open.

1. Install safety brake pin into Swing Arm with ¼ - 20 acorn nut.
2. Unplug AC and RF connectors at the wall and TV.
3. Lift open nose cover by removing two side screws.(Fig. 1)
4. Remove retainer bolt and lock washer. (Fig. 2)
5. Remove the back channel cover for access to cables. (Fig. 3)
6. Remove the TV from the arm mount.

**NOTE:** Cables are not shown for clarity of the view.

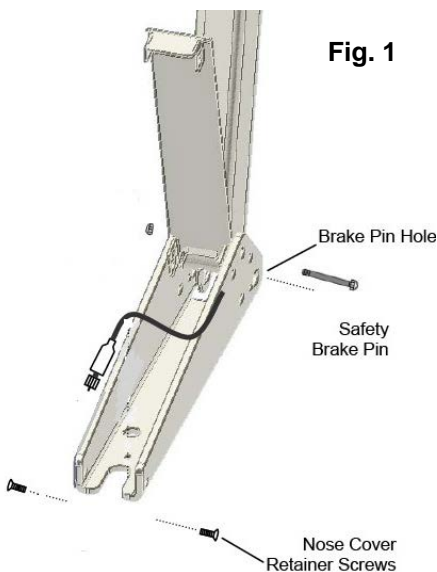

**Fig. 1**



**Fig. 2**




**Fig. 3**

7. Remove (cut) power cable from arm. (Fig. 4) The cable clamp screws may need to be loosened to remove the AC cable.
8. Cut coax cable and re-terminate at the nose of the arm.


**NOTE:** Refer to PD196-159 or PDITCH002 documents for assistance, depending upon which coax cable you have solid core or stranded cable.

**Fig. 4**

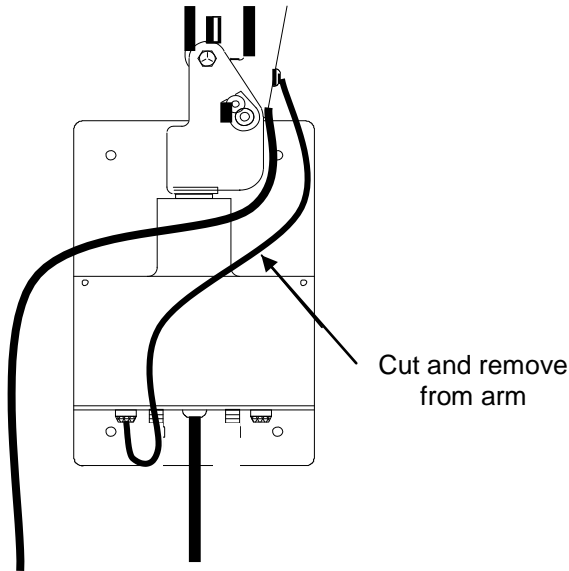

9. Install retainer nuts in arm nose per PD196-098 instructions.
10. Install the P15X television per instructions.

**Fig. 5**

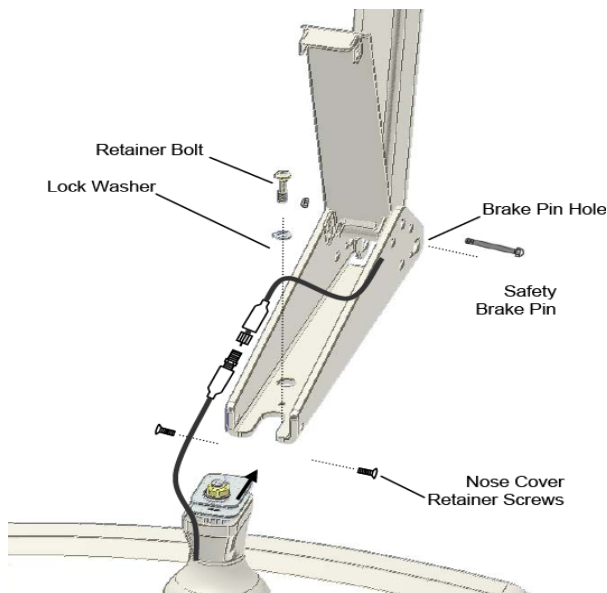

11. Remove, but keep, (4) screws and take off power supply faceplate.
12. Place the new power supply (796 AYC) into base and secure with screws from Step 11.
13. Connect coax from arm to the output of power supply.
14. Connect RF from wall to input side of the power supply.
15. Setup per P15X TV Quick Start Guide instructions.

**Fig. 6**