


MODEL PDI-Z25TV-WR, PDI-Z27TV-WR, PDI-Z32TV-WR Series Page 1 of 2 WALL MOUNTED COLOR TV

INSTALLATION INSTRUCTION SUPPLEMENT





THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO ALL LOCAL CODES. READ AND FOLLOW THE SAFETY INSTRUCTIONS BEFORE ATTEMPTING THIS INSTALLATION.

Note to CATV installer. This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry into the room as practical.



WARNING:OXYGEN ENVIRONMENT DO NOT use in an oxygen tent or oxygen chanber. Such use may cause a fire hazard.

WARNING: To avoid the hazards of fire or electric shock, DO NOT expose this TV to rain or moisture.

MOUNTING

The instructions assume you have successfully mounted the TV using an approved mounting method. Consult the mounting equipment manufacturer for compatibility with this Zenith television.

PILLOW SPEAKER WIRING


A ¹/₄" stereo style pillow speaker (pendant control) jack is located on the TV's back panel. A pin-out is provided below. The television will interface to many of the newer digital TV pillow speakers or the older single button dry-contact switch type. Use type SJ cord or better between the TV and the bedside pendant control. Please refer to the *Pillow Speaker Compatibility* chart on the last page of these instructions to select a useable pillow speaker.

Single Button

The single button switch closure should be wired between Sleeve and Ring. The speaker connects between the Sleeve and Tip.


Digital

The pillow speaker common connects to the Sleeve, speaker connects to the Tip, and data connects to the Bing.





CAUTION Installer. This product is not provided with a pendant control. It is expected that the institution (or hospital) will provide one for attachment to the Pillow Speaker Jack on the back of the TV. As part of the installation, examine the pendant control to verify whether a marking similar to the one below appears on it: 'CAUTION – Risk of fire if used in oxygen-enriched atmosphere – return to hook or holder after use.'

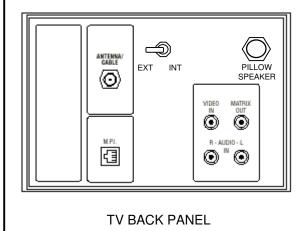

OPERATING THE TV

Connect the pillow speaker plug into the pillow speaker jack located on the back of the TV.

SINGLE BUTTON PILLOW SPEAKER

- TV ON Press the button once.
- CHANNEL UP Press button once.
- TV OFF Press and hold the button down. TV will shut OFF in 3 seconds.

DIGITAL PILLOW SPEAKER

 Press the corresponding TV feature on the digital pillow speaker. See Supported TV Feature on back page of instructions.

INT EXT SWITCH

- INT TV audio plays in TV's speaker.
- EXT TV audio plays through pillow speaker.



SUPPORTED TV FEATURES

The PDI pillow speaker interface supports both digital or single button pillow speakers.

Digital Pillow Speaker Supported TV Functions

- 1. Channel Up
- 2. Channel Down
- 3. Direct Channel Number Access
- 4. ON/OFF
- 5. Mute
- 6. CC (Closed Captions)

Single Button Pillow Speaker Supported TV Functions

- 1. ON/OFF
- 2. Channel Up

Multi-Button Non-Digital Pillow Speaker TV Functions

1. NOT SUPPORTED

COMPATIABLE

PILLOW SPEAKERS

| Make | Analog | Digital | Direct Access |
|---------|-----------|------------------------------------|--------------------------|
| Curbell | 3103-001 | 3D0103096000ZM0- 001 | D0108-A0Z-R0001 |
| MedTek | A1833-087 | | A1552-087D A1871-087D |
| Crest | | XL031E0AXXXZ1N1 XL031E1AJ00Z1N1 | |

NOTE: Compatibility of any other model pillow speaker not guaranteed.

TROUBLESHOOTING

TV DEAD

- The TV is powered from an AC wall outlet. Verify the unit is plugged into AC outlet.
- Power is OFF to the outlet, check fuse or circuit breaker.
- Unplug unit for an hour, then plug it back in.

TV SHUTS OFF

- No broadcast or station tuned.
- Sleep Timer is set.
- Power interrupted.

POOR RECEPTION

- Station or CATV experiencing problems, tune to another station.
- Make sure channels are set into memory.
- Check CATV connections.
- Check for sources of possible interference.

NO RECEPTION

٠

- Check all CATV cable connections.
- Set TV/CATV menu option to CATV mode.

NO RECEPTION ABOVE CHANNEL 13

• Make sure TV/CATV menu option is in the appropriate mode.

PILLOW SPEAKER IS INOPERATIVE

- By-pass the cross-room bedside wiring plug pillow speaker directly into the pillow speaker jack on the side of the TV. If the pillow speaker controls TV check cross-room wiring.
- If a digital pillow speaker is used verify compatible pillow speaker model for use with this TV.
- Verify correct interface wiring.

CONTACT INFORMATION

PDI Communication Systems
40 Greenwood Lane
Springboro, Ohio 45066Phone: 937.743.6010
Engineering: pdi@pdiarm.comInternet: http://www.pdiarm.comSales: sales@pdiarm.com