


AUTOMATIC FEATURES

In the event of a potential fall, lack of motion or periodic check-in, the device will start a pending local alarm. You have 30 seconds to press the latch, canceling this local alarm before it escalates to monitoring personnel as a remote alert.



No motion

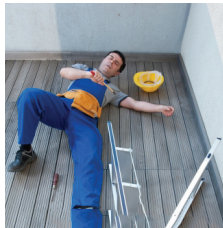

Fall detection



Check-in

MANUAL FEATURES

Pulling down on the latch will immediately start a local alarm and send a remote alert to monitoring personnel. Local alarms can be silenced, but the remote alert remains active. Press and hold the latch to send an early check-in and update your location.



Emergency Alert

Request immediate help by pulling down the red latch.




Early Check-In


Check in early and send an updated location by pushing in the latch for 2 vibration cycles.

DURING YOUR SHIFT

Starting your shift

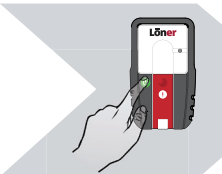

Press the power button to turn on your device.

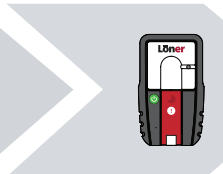


Wait for solid green light.



Clip on your hip.

Throughout your shift

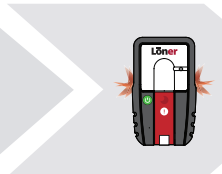

A local pending alarm (no motion, fall detection, check-in).




Press the latch if you are OK. This stops escalation of the local alarm.


Ending your shift



Press and hold the power button to turn off.

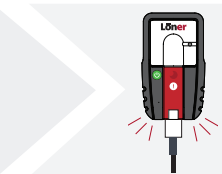

Plug in device to charge. Flashing lights means the device is charging.

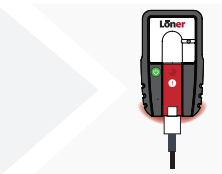

Solid red lights mean the device is fully charged.

REQUESTING HELP



Pull the latch to immediately trigger a remote alert.



Press latch to silence the local alarm. This does not cancel the remote alert sent to monitoring personnel.



The blue light means your remote alert has been acknowledged by monitoring personnel.

2 WAY VOICE CALLS



BEEP

When monitoring personnel connect with the device, it will beep once.



Blackline Safety:
Are you OK?

Once the call is connected, you can talk back and forth with monitoring personnel.



BEEP

When monitoring personnel disconnect the call, the device will beep once more.