


CUBISCAN 325 SETUP

QUICK REFERENCE GUIDE


This quick reference guide provides instructions for assembling and setting up the Cubiscan 325. For more detailed instructions on setting up the Cubiscan 325, see the *Cubiscan 325 Operations and Technical Manual*.

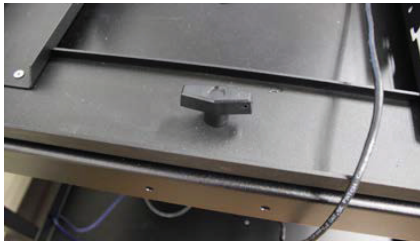

T-handle



Load cell ball

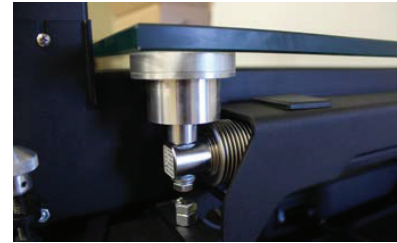

Glass on load cell

- 1 > Remove the box of accessories from the crate and remove the wooden supports holding the Cubiscan in place. Remove the box of glass and set it in a safe place.
- 2 > Using two people, lift the Cubiscan 325 and place it in the location you will be using it. If you purchased a mobile cart with the Cubiscan, use the T-handles in the accessory box to secure the Cubiscan to the cart.
- 3 > Carefully lift the gate up and place it in the gate tray; avoid pinching any cables. The front of the gate (the side with the handle) must face the front of the system. Secure the gate to the gate tray using the eight Phillips screws provided. (Some slot screws may already be in place.)
- 4 > You now need to level the Cubiscan. Check the bubble levels on both ends of the Cubiscan. If the Cubiscan is not level, adjust the feet located in each corner until the Cubiscan is level.
- 5 > Place the four load cell balls in the load cell cups.
- 6 > Screw the four glass platform ball sockets into the pucks that are already attached to the glass.
- 7 > Using two people, place the glass platform on the load cells; avoid placing excessive force or stress on the load cells.
- 8 > Using the two wing nuts on the back of the touchscreen, attach the touchscreen to the mount at the front of the Cubiscan. Plug the touchscreen in.
- 9 > Loosen the gate stop by turning it counter-clockwise.
- 10 > Attach one end of the power cord to the controller, and the other end to a power source. The controller is located beneath the gate home position.
- 11 > Power the Cubiscan 325 on by flipping the on/off switch located on the controller.



Attached touchscreen



Ball socket



Gate stop