
Technical Bulletin

PDI-Z13TV Series Arm Mount Television Brightness Adjustment

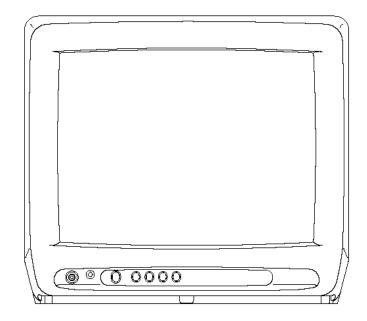



PH: 937-743-6010 FX: 937-743-5664

http://www.pdiarm.com

Brightness Adjustment Field Instructions

BACKGROUND

The arm mounted Z13TV is powered from an external low voltage AC power supply. Due to differences in power supplies and coax resistance feed lengths variations occur in the actual voltage that reaches the TV. Excessively bright or dark pictures may result. This procedure describes a simple adjustment to compensate for these variations.


IR REMOTE

Adjustment to the picture can be readily made using the IR remote. Press the MENU button to activate the on-screen menu. Navigate to the brightness and contrast screens and adjust as needed.

INTERNAL BRIGHTNESS

Should IR remote control adjustment not correct the picture, an internal brightness adjustment is available through a slot in the back cabinet.

- 1. Turn the TV ON and swivel the cabinet around to provide access to the back of the cabinet.
- 2. Find the adjustment openings located in the lower right portion of the cabinet back. Adjustment potentiometers are located behind each slot. Carefully, insert an insulated flat plate screw driver into the lower slot.

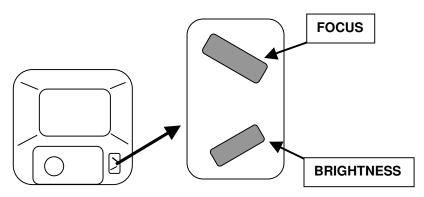

- 3. Adjust the brightness for best picture.
- 4. Tune the TV to additional channels and verify the picture brightness is correct.



BRIGHTNESS ADJUSTMENTS SHOULD BE MADE ONLY BY A QUALIFIED SERVICE PERSON