


# How to Wear Modjoul SmartBelt

**Step 1** Turn the SmartBelt on by sliding the on/off switch located on the bottom of the buckle.

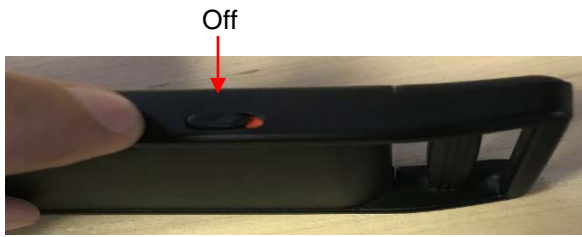

**Step 2** Thread the SmartBelt through your pant loops, making sure the “Modjoul” text is facing outward.



**Step 3** Adjust the fit of the SmartBelt by threading through the buckle. Pull tightly to ensure a snug fit.



**Step 4** Ensure the SmartBelt buckle is:

1. Powered on – the light can be red, green or blue
2. Light is on top of buckle
3. Worn through your belt loops
4. SmartBelt is snug and buckle is centered

