



RECOMMENDED CLEANING & STORAGE ACCESSORIES



For use in sanitation & storage areas.

MOBIUSTRIMMER.COM

MOBIUS STORAGE ACCESSORIES

To complete your Mobius installation, consider adding the following items to your sanitation and storage areas.

HELICAL BLADE STORAGE



SUPPLIER:

Eteros

Dim. L37.2" X W12.5" X H4.0"

Stackable: No

Recommended quantity: Enough for all helical blades on site.

APPLICATION:

- Helical blades anchor into ends of racks allowing blades to be rotated and washed easily
- Can also be used to store helical blades between uses
- Fits in the Soak N' Store tub

HELICAL BLADE SUPPORT



SUPPLIER:

Eteros

Dim. L24.42" X W12.5" X H4.3"

Stackable: No

Recommended quantity: One for the sanitation department and one for the maintenance department.

APPLICATION:

- Cradles the helical blade itself to provide easy cleaning access to the helical blade bearing ends, as we do not recommend submerging these components
- Offers essential protection to the blade edges while you wipe away residual plant material.
- Fits in the Soak N' Store tub

BED KNIFE & SPACER BAR



SUPPLIER:

Eteros

Dim. L24.42" X W12.5" X H4.3"

Stackable: Yes

Recommended quantity: Enough for all bed knives and spacer bars on site.

APPLICATION:

- Safely store three bed knives and three spacer bars when not in use
- Can secure three bed knives blade-up to help clean residue.
- Can be submerged in your cleaning solution
- Fits in the Soak N' Store tub

**SUPPLIER:****Uline** Item H-5001**Overall Dim.** 72x30"**APPLICATION:**

- Use to place parts while disassembling or cleaning.
- Store racks, cleaning solutions and other accessories.
- Purchase with casters to easily move it around your facility.

**SUPPLIER:****Uline** Item H-1521**Overall Dim.** 60 x 24 x 41"**Shelf Dim.** 48 x 24"**APPLICATION:**

- Use cart to move Mobius parts from trim room to sanitation area
- Remove Mobius lid and place upside down on top shelf
- Remove helical blades and bed knives and place them on the other shelves

**SUPPLIER:****Uline** Item H-2946-63**Overall Dim.** 48 x 24 x 63"**APPLICATION:**

- Use cart to store and / or move Mobius parts from trim room to sanitation area.
- Add casters (see below) to make shelving unit transportable.

**SUPPLIER:****Uline** Item H-4562**APPLICATION:**

- Add to chrome wire shelving unit (above) to make shelving unit transportable.

**SUPPLIER:****Uline**

Two Sizes:

1. Long edge: Item H-1765C (48 x 4")
2. Short edge: Item H-1763C (24 x 4")

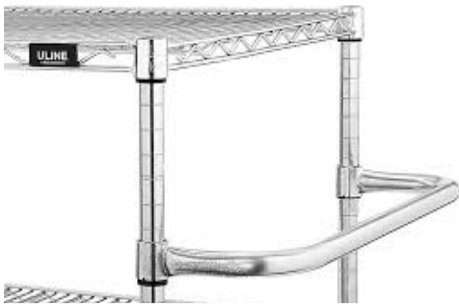
APPLICATION:

- Install on lower shelves to prevent items from rolling off.

**Uline** Item H-2440**Size** 48" x 24"

- Use to line shelves of carts so that blade edges don't get damaged and small pieces of equipment and/or plant resin don't fall through

- Removable for cleaning

**SUPPLIER:****Uline** Item H-2929

Used with wire shelves.

APPLICATION:

- Add to stock picker cart to make moving easier

**SUPPLIER:****Uline** Item H-4841C

Used with wire shelves as utility basket.

APPLICATION:

- Add to stock picker cart to store spray bottles of cleaners, cleaning rags
- Add to stock picker cart to store small Mobius accessories, such as extra tandem locks, conveyor sensor override pucks or trim tote gaskets

**SUPPLIER:****Uline** Item H-1205S

Used with wire shelves.

APPLICATION:

- Add to stock picker cart to hang spray bottles of cleaners, cleaning rags

MOBIUS CLEANING EQUIPMENT

SOAK 'N STORE TUB



SUPPLIER:

Order direct from Eteros

Part # 00-02-001579

Dim. 48 x 15 x 11"

Recommend ordering four Soak 'n Store tubs per Mobius machine

APPLICATION:

- Use to soak and/or store tumblers, helical blades and bed knives
- Note, helical blades and bed knives should not be stacked on top of one another. Rather, they should be cleaned and stored in a single layer.

PRESSURE WASHER



SUPPLIER:

Uline carries both electric and gas pressure washers. Note, these do not have steam options. For optimal results, select a pressure washer with a hot water/steam option.

Electric: Item H-3049

Gas: Item H-7358

APPLICATION:

- Use to spray down removable parts of the Mobius, including the separator housing, fan housing, trim totes, blades, brush and screens.
- Do not use a pressure washer on the main body of the Mobius.

PRESSURE SPRAYER



SUPPLIER:

Uline Item S-20860

APPLICATION:

- Fill the tank with warm water and degreaser and spray any plant-touching parts of the Mobius that are not soaked

TOOLS, CLEANERS & SANITIZERS

CLEANING TOOLS

SUPPLIER:

AVAILABLE FROM A VARIETY OF SUPPLIERS

RECOMMENDED ITEMS:

- Microfibre cloths
- Metal and plastic razors
- Scrub brushes
- Heavy-duty disposable towels
- Spray bottles for cleaners and sanitizers

CLEANERS

SUPPLIER:

A variety of cleaners are available on the market. Ensure that the cleaner selected is compatible with the material it is used on. These are cleaners that we have had success working with:

RECOMMENDED ITEMS:

- [RESIN8 XTRA](#) (available from Avmor distributors you can find on [this page](#))
- [Superclean](#) multi-purpose degreaser (available at a variety of retailers) – **Note:** Superclean is not compatible with anodized aluminum
- [Tub O' Towels Heavy Duty Cleaning Wipes](#) (available at a variety of retailers)
- Stainless steel wipes (available at a variety of retailers)

SANITIZERS

SUPPLIER:

A variety of sanitizers are available on the market. These are some that we've worked with or are commonly on-hand:

RECOMMENDED ITEMS:

- [Shyield](#) wipes or concentrate
- [Spectrum Sanitizer](#)
- Isopropyl