



ODOROX
Hydroxyl Group

Boss XL3 Quick Set-Up

SET-UP INSTRUCTIONS

- STEP 1:** Remove the side panel from the XL3 and remove the white foam packaging. Connect the optics to the wire harnesses as shown in Diagram 1. Close side panel.
- STEP 2:** Place a centrifugal air mover next to the XL3 as shown in Diagram 2.
- STEP 3:** Plug the XL3 into a 120 volt power supply. **Red LED should illuminate**, which indicates that the XL3 now has power.
- STEP 4:** Turn on the air mover, and set the XL3 Processor to either Low or High. **Green LED should illuminate**, which indicates that the XL3 is now operating. *Please note, the XL3 will not operate unless the air mover is turned on.
- STEP 5:** Set Processor to Low to use 2 UV optics, and set Processor to High to use 3 UV optics. High setting is usually recommended, but Low setting can be used for light odors and small areas.

DIAGRAM 1


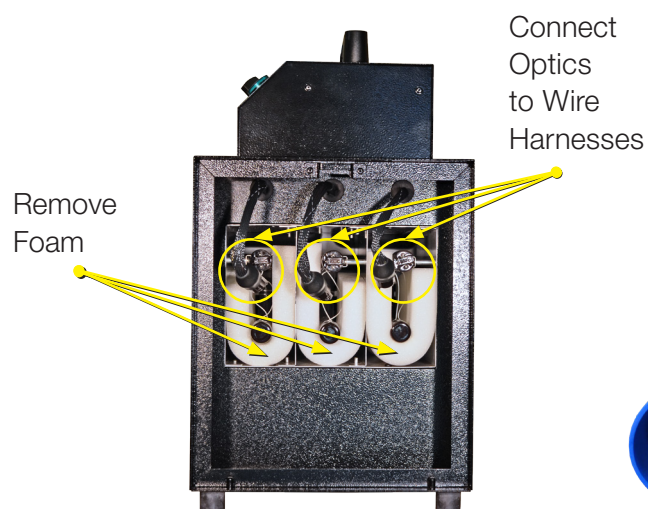


DIAGRAM 2

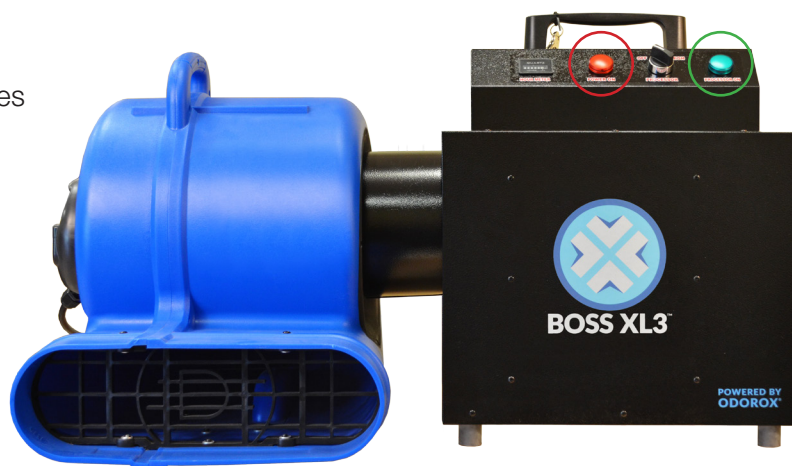

Correct Set-up