

Care@Home™




C7000 Series

Getting Started





The Best Location for the C7000

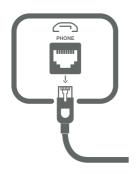

Near a phone jack



Near a network port



Convenient for resident to access






Where speakerphone can be heard throughout premises




Setting Up the C7000

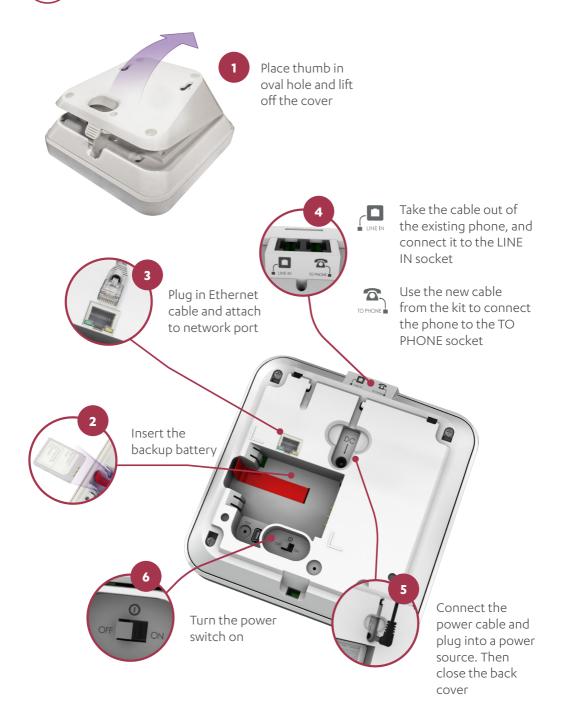



Using the C7000

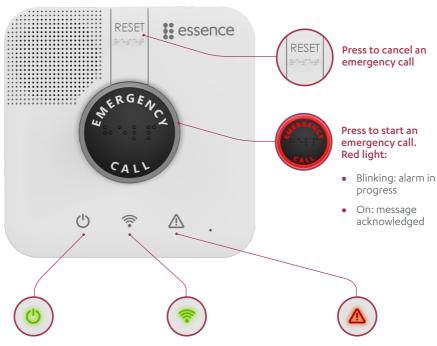

Shows power status

- On: AC power connected
- Blinking: using battery
- Off: no power

Shows communication status

- Green: if on, ready for call.
 If blinking, message being
- Red: if on, communication failure
- Orange: active conversation

Shows problem status

- On: malfunction in the C7000 or a peripheral
- Blinking: supervision lost, or low battery in a peripheral

For more information, see: $\underline{\text{http://www.essence-grp.com/resources/smart-care-download.html}}$

Legal notice: http://www.essence-grp.com/html/concerning_documents.html

www.essence-grp.com • info@essence-grp.com

