




uvex silv-Air c Flat Fold

How to don uvex respirators



The uvex silv-Air c breathing protection range is suitable for protection against solid and liquid aerosols, dust, mist and smoke, but does not offer sufficient protection against gases and vapours above the threshold level!

FITTING INSTRUCTIONS

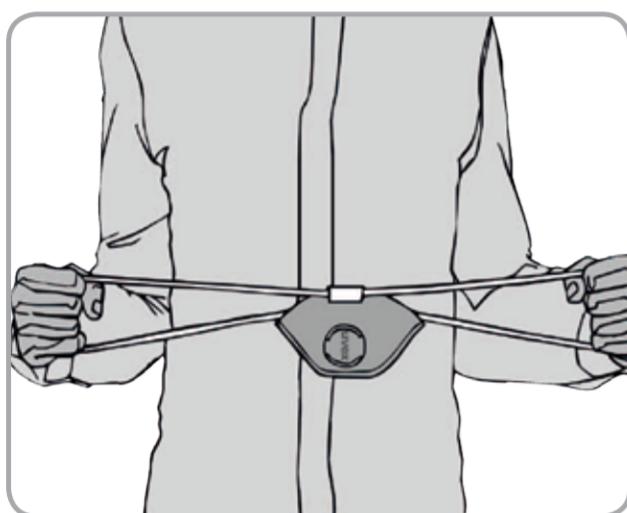

Step 1
Stretch the headband. The uvex headband is made of synthetic latex and can be stretched before use.



Step 2
Put your hand between the headband and the mask. Place the noseshape between your middle finger and the forefinger.



Step 3
The mask can now be placed onto your face.



Step 4
Slip the headband over your head.



Step 5
Apply the headband.



Step 6
Make any final adjustments to headband.



Step 7
Adjust the noseclip to fit comfortably across the bridge of your nose.



Step 8
If required: place your uvex spectacle on the mask or on the bridge of your nose.

FFP 2



8733-208
FFP2 without valve



8733-218
FFP2 with valve



8733-228
FFP2 with valve and carbon

FFP2 respirators are intended for use against both mechanically and thermally generated particulates in concentrations up to ten times exposure standard.

CALL: (02) 9891 1700 for more information on uvex breathing protection



protecting people

www.uvex-safety.com.au