


## Reversing Mode – AccuDry2


**WARNING:** Any maintenance work undertaken on a James Heal instrument must be done so by a trained and competent person. Where electrical work is detailed, this should only be completed by a qualified engineer. James Heal is not responsible for damage or injury arising from work carried out by any person not qualified to do so. If in doubt, please contact James Heal or your local James Heal Agent.

Switch the Accudry2 on. The controller will automatically go through its 3 start up screens.


First screen



Second screen

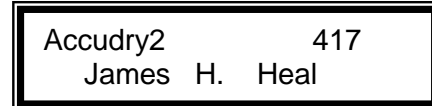


Third screen

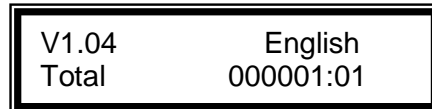


When the third screen which shows the current language is displayed;

Press the number 1 button

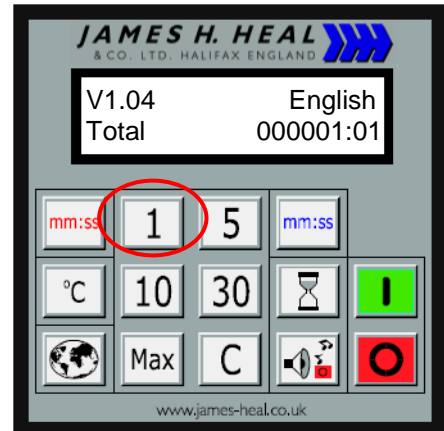

Pressing button number 1 again turns the reversing mode on/off .  
Reversing mode is on when ↑↓ is displayed at the top left of the screen.

Reversing on

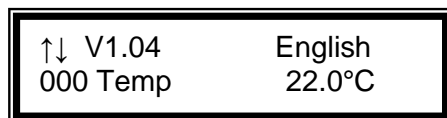

Reversing off

