

FILTERSCAN® WiFi Home Air Filter Monitor - Model FS-245-B & AirFilterSentry™ Notification Service

Congratulations on your purchase of the FILTERSCAN WiFi Air Filter Monitor for Homeowners! Once you are done with the installation and calibration of your unit you can be confident that you have eliminated clogged air filters forever. The procedure described here is designed for the most common HVAC installations. However, every building is different and you will find more detailed instructions in the FILTERSCAN WiFi Home Installation and User's Manual, which is available at <http://www.cleanalert.com/resource-library>.

NOTE: If you are installing in an attic or crawl space, we recommend installing the optional Tubing Kit and also mounting downstream.

WHAT'S IN THE BOX

- FILTERSCAN WiFi Home Air Filter Monitor, Model FS-245-B
- 4 "AA" Energizer Ultimate Lithium Batteries – Critical: The use of alkaline batteries will significantly reduce battery life
- **Read This First** document - Critical
- This Quick Start Guide
- Drill template
- Mounting screws
- Optional CA-360 6V External wall adapter

WHAT YOU WILL NEED FOR INSTALLATION

- A wireless Internet router configured either with no wireless Internet security or with WEP128, WPA1-PSK (TKIP) or WPA2-PSK (AES) wireless security.
- If the router does not have a WPS button, you will also need another WiFi Internet-connected device, such as a smartphone, tablet, or laptop. You will also need the SSID (Network Name) and password for your network. **NOTE: Insure "\$" is not used in SSID, and "\$", "#", and "&" are not used in the password.**
- Broadband (NOT Dial-up) Internet service
- Center Punch
- Power drill
- 7/64" Drill bit
- 3/8" Drill bit or step drill
- #2 Phillips screwdriver
- A pencil or other non-metallic thin stick
- Eye and ear protection (Recommended)

STEP 1: SIGN UP AND CONFIGURE YOUR AirFilterSentry™ ACCOUNT

Your monitor will issue visual and audible alerts whenever it determines that your air filter has become clogged and needs to be replaced or cleaned. If you also want to receive text and e-mail alerts as well as view the status of your air filter online anytime, you must sign up for the AirFilterSentry™ Notification Service at cleanalertwifi.com. There are NO subscription fees.

Signing up for and configuring the AirFilterSentry Notification Service is easy:

1. Go to cleanalertwifi.com and press the "Sign-up for AirFilterSentry" button.


2. Enter a valid email address (becomes “User Name”) and password for your account.
3. Receive a confirmation email and follow the instructions in it.
4. Enter your monitor information.
5. Enter your contact information (email IS the account “User Name”).
6. You will then be sent to the Home page.

If you are signing up and configuring more than one monitor, press the “Add Monitor” button on the Home page and provide the information for the additional monitor(s). You are now done.

For more detailed instructions on how to sign up and configure your monitor on the AirFilterSentry website, consult the **FILTERSCAN WiFi** Installation and Reference Manual.

STEP 2: CONNECT TO AirFilterSentry™

Remove the front cover of the monitor by pressing on the sides of the housing. The inside of the monitor is shown below.

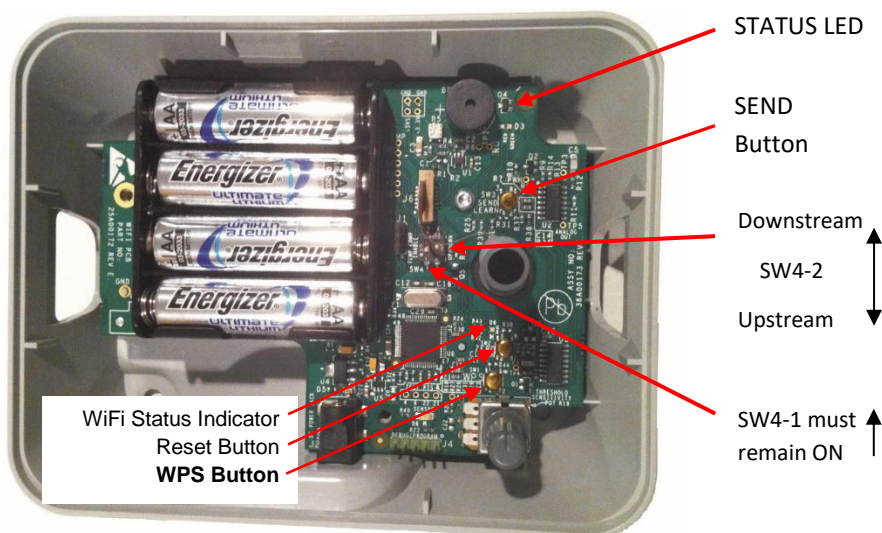

Install the 4 included AA **Energizer® ULTIMATE LITHIUM** batteries in the battery holder, making sure you put them in facing exactly as shown in the figure above. When you do, a number of LED's on the monitor's printed circuit board will start to blink. Wait about one minute until the blinking has stopped. There will be a red STATUS LED on at the upper right in the figure above, and a green LED on at the lower right in the figure above.

Determine whether your router has a WPS button and where it is located on your router. If your router does not have a WPS button, you will need to connect the monitor to the AirFilterSentry server using the procedure found in the section “Connecting Your FILTERSCAN WiFi Home Air Filter Monitor with your Wireless Router without a WPS Button” in the Installation and Reference Guide. Once you complete that procedure, skip to Step 3 below.

Depress the WPS button on your **wireless router** and hold it for two to ten seconds, until its LED begins to blink.

Using a pencil eraser, toothpick, or other non-metallic object, depress the monitor WPS button (see the figure above) just once until you feel it “click” and immediately release it. The WiFi Status Indicator will start blinking green, then amber, and then green again. If the WiFi Status Indicator only blinks green or amber before it goes off, and never blinks red, it has successfully paired with your router. Go to Step 3.

If the WiFi Status Indicator blinks red before it goes out, a problem has occurred in connecting your monitor to your wireless router or to the **AirFilterSentry** server. Please go to the “WiFi Status

Indications Table 1” in the Installation and Reference Guide to find the source of the problem. Once you have corrected the problem, return to Step 2 and try to connect again.

If the WiFi Status Indicator continuously blinks amber, the software is being updated. Please wait until the blinking stops, approximately two minutes.

STEP 3: INSTALLING YOUR **FILTERSCAN WiFi Home Air Filter Monitor**

Although not necessary, it is suggested that a licensed technician perform the installation.

WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions may result in electrical shock and/or serious personal injury.

With the cover still off, temporarily hold the monitor on the **RETURN** air plenum of your central air conditioning system or forced-air furnace. Use a pencil eraser or other non-metallic object to press the **Send** button on the printed circuit board. See the diagram above for the button’s location. The WiFi Status Indicator will begin to blink green, then amber. If it goes off without blinking red, the monitor is able to communicate with your router from that location and you can install the monitor there. However, if the WiFi Status Indicator blinks red before going off, the signal between the monitor and router is too weak. You need to move your router so that either they are closer together or there are fewer obstructions (walls, ceilings, etc.) between them. You can also try rotating your router so that a different side faces in the direction of the monitor. After making these adjustments, press the **Send** button again and see if you can get the monitor and router to successfully communicate with each other. If none of these adjustments work, your remaining option is to add a WiFi router “repeater” or “range extender” to your home WiFi network. These devices are placed between your router and the monitor and “extend” the signal between them. We strongly recommend you get one with a WPS button. Once you install it, repeat Steps 2 and 3, treating the range extender as if it were your router.

Consult the **Read This First** document and determine whether you are going to mount the monitor upstream or downstream of the air filter. Set the Upstream/Downstream switch (SW4-2) to ON for downstream mounting or OFF for upstream mounting.

WARNING! Ensure that the HVAC system blower motor/fan is turned OFF until instructed otherwise!

Locate a spot on the **RETURN** side of your central heating and cooling system – preferably between the air filter and the system blower – that is large enough for you to place the monitor template on a flat surface and is free of obstacles inside the duct. **NOTE:** The minimum distance for positioning the **FILTERSCAN® WiFi Home Air Filter Monitor** from the air filter is six (6) inches. And, there should be at least 6” of clearance from the surrounding walls and from any other components of the system.

Tape the monitor template on the system such that "TOP" is facing upward. Use a center punch to start each hole. Drill one 3/8" hole for the sensor and four 7/64" holes for the mounting screws. Use care when drilling to insure no internal parts are damaged by the drill.

Place the monitor over the holes and align its sensor tube with the larger hole. Attach the Housing to the air plenum using the mounting screws supplied. Note the sensor tube does not extend into the duct. **Replace the front cover on the monitor.**

STEP 4: CALIBRATE YOUR MONITOR

Note: If you are not going to calibrate your monitor immediately after installing in Step 3 above, REMOVE the batteries. When ready to calibrate after initial installation, reinstall the batteries.

Install a clean, new air filter into your heating and cooling system.

1. After power is first applied, wait for approximately 15 seconds (warm up and stabilization time).

2. Turn the HVAC system OFF at the thermostat. Ensure the HVAC system blower is turned OFF and that no conditions exist during this part of the calibration that would cause air to be moving within the HVAC ducts, such as opening and closing of doors or windows.
3. Install a clean, new air filter into the HVAC system.
4. Depress the **RESET** button, holding for two seconds until the **STATUS** LED turns Green and a beep is heard.
 - a. After approximately ten seconds, the **STATUS** LED will blink yellow for approximately 20 seconds while the **FILTERSCAN WiFi Home Air Filter Monitor** records the HVAC system's FAN OFF condition. When the blinking amber stops, this indicates proper operation.
 - i. However, if the unit detects air flowing in the air duct, the **STATUS** LED will blink red. In this case, check to see that the system blower fan is OFF and that no condition described in #2 above exists. If no such condition exists, start again at #1. If the error condition persists, call 888-414-FLOW (3569) for instructions.
 - b. **IF YOU PRESS RESET BY MISTAKE**, press it again for 2 seconds until the Status LED blinks Amber and a beep is heard.
5. Wait at least one minute before turning your HVAC system ON – The **FILTERSCAN WiFi Home Air Filter Monitor** is starting the automatic calibration process during this time, calibrating itself to the air filter and HVAC system into which it is installed.
6. To verify communication with the AFS server, you may depress the **SEND** button momentarily at this point, then log into your AFS account, and select Filter Status, where you should see "OK" for Status or Device Health.

Your **FILTERSCAN WiFi** Home Air Filter Monitor is now completely operational, helping protect you from the consequences of running your HVAC system with a clogged air filter.

The **SERVICE FILTER** control is pre-set to mid-range. Refer to the Installation and Reference Guide.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contains FCC ID Number: **T9J-RN171**

IC Compliance

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme à Industrie Canada exempts de licence RSS norme. Opération est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas causer de brouillage et (2) cet appareil doit accepter toute interférence, y compris les interférences pouvant causer un fonctionnement intempestif du dispositif.

Model: FS-245-B

Model: FS-245-C

Contains IC Certification/Registration Number: **#6514A-RN171**

Modèle: FS-245-B

Modèle: FS-245-C

Numéro de Certification / d'enregistrement les IC: **#6514A-RN171**