



# Clare Controls Thermostats Integration Release Notes

## Content

- Introduction...1
- Installing the Clare Controls thermostat...2
- Connecting to ClareHome...3
- Enabling auto changeover...4
- Configuring rules with Clare thermostats (optional)...5
- Contact information...6

**Last modified:** 05/03/18

## Introduction

When integrating a Clare Controls Wi-Fi thermostat into your ClareHome project, no extra connections are necessary. Install the thermostat per the Clare Controls documentation, access the thermostat using the IP address, configure the thermostat settings, and then connect it to the network.

All HVAC integrations share a common UI, so that the user experience is consistent. Temperature settings can be controlled via events. Use Fusion's Scenes and Rules to automate the actions your customers want.


**Note:** The Clare Controls thermostats are programmed with a default schedule. This schedule can interfere with ClareHome and Fusion configuration. Disable the default schedule to allow greater customer access and control. Follow the integration notes below.

### Supported models:

- CH-TSB10-WF
- CH-TSM10-WF

The Following figure shows the Clare Thermostat on the ClareHome UI.

**Figure 1: User interface of the CH-TSB10-WF thermostat.**

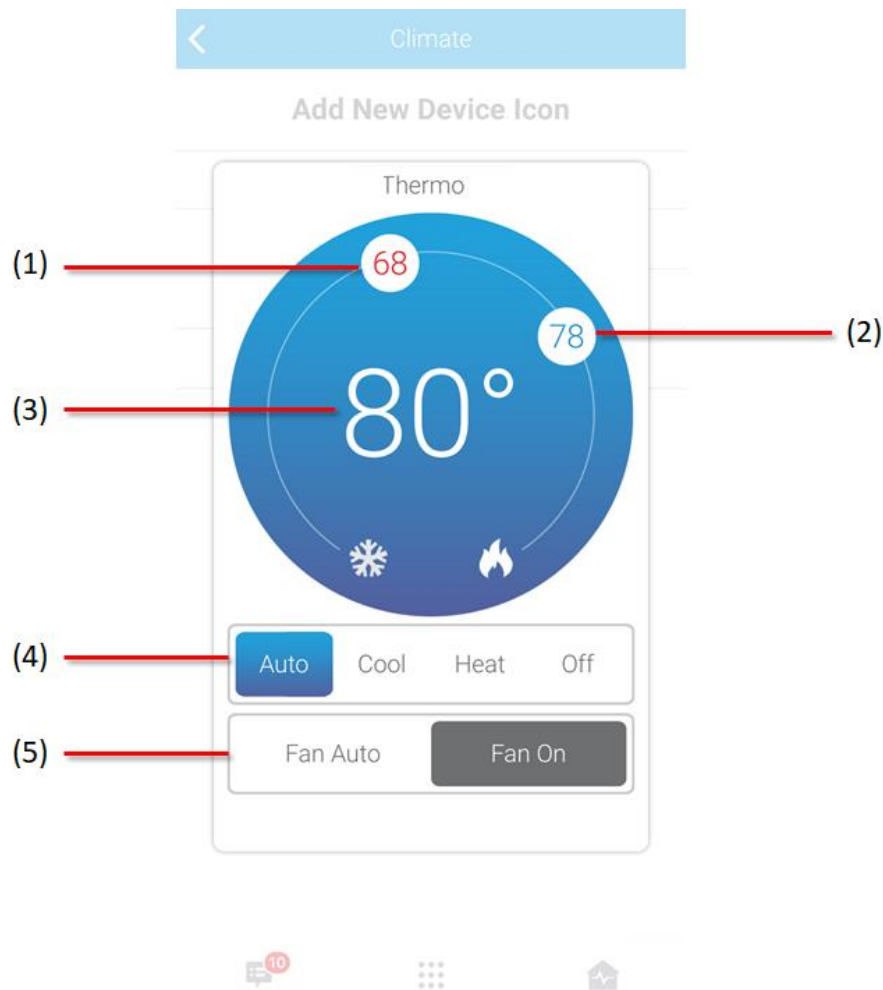

- (1) Change the Heat set point by sliding the indicator around the dial.
- (2) Change the Cool set point by sliding the indicator around the dial.
- (3) Temperature setting displays on the ClareHome UI in Fahrenheit.
- (4) Change the Operation mode using the slider control.
- (5) Change the Fan mode using the slider control.

## Installing the Clare Controls thermostat

A qualified HVAC installation technician should install the Clare Controls thermostat. Refer to the documentation that came with the thermostat for detailed installation instructions. Clare Controls does not assume any responsibility for damages caused by improper installation or connection to the data network.

# Connecting to ClareHome

After installation, you must connect the thermostat to Wi-Fi, enable auto changeover, disable the default schedule, and then verify the thermostat is set to automation system. This allows the thermostat to be accessed remotely and updated with information from the Clare Home App.

**Note:** The thermostat is set to Automation System by default. If it is no longer set to Automation System, the thermostat will not connect to ClareHome.


## To connect the Clare Controls thermostat to Wi-Fi:

**Note:** When the Clare Controls Wi-Fi thermostat is powered on, it broadcasts its own Wi-Fi.

1. Use a laptop, Android smartphone, or iOS device to connect to the Clare Controls thermostat's Wi-Fi.


**Note:** The Wi-Fi appears as CLAREHVACXXXX. The X's are replaced with the last 4 characters of the MAC address. For example, if you are using a Clare Controls Wi-Fi CH-TSB10-WF with the MAC address AA:F4:E6:B1:22, the Wi-Fi network is CLAREHVACB122.

2. Browse to <http://192.168.1.99/clare.html> to access the thermostat's web interface.

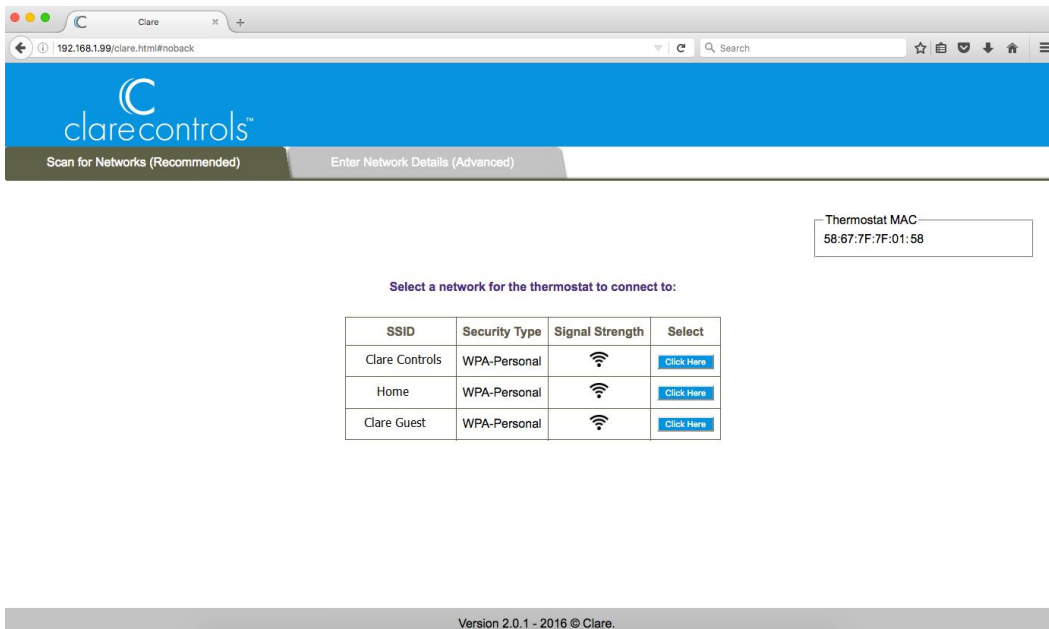

3. Click **Click here** next to your home's wireless network.

#### 4. Enter the password.

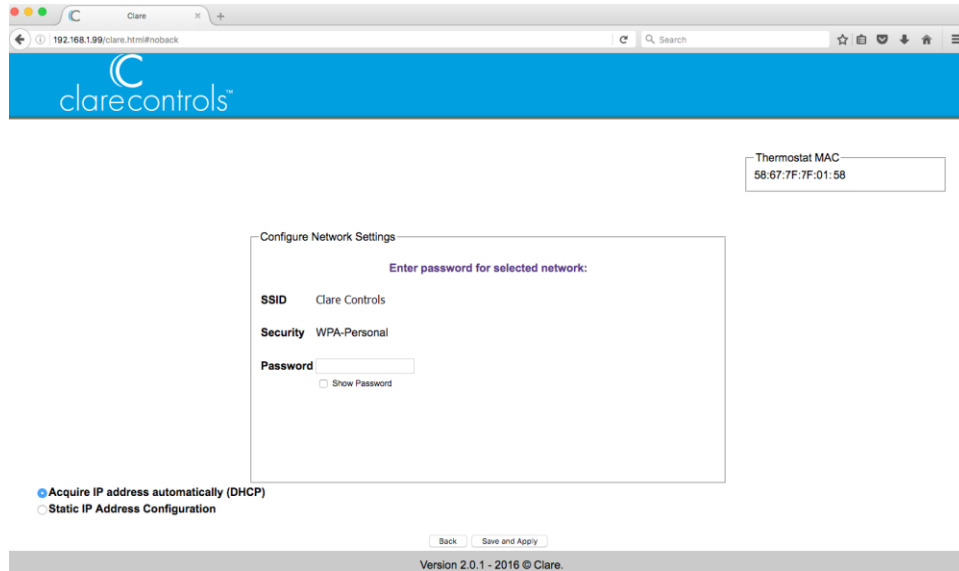

#### 5. Click **Save and Apply**.

The Clare Controls settings are saved.

## Enabling auto changeover

Enable auto-changeover to allow the thermostat to automatically switch between heat and cool modes. Once auto-changeover is enabled, the thermostat reboots.

### To enable auto changeover in the CH-TSB10-WF:

**Note:** Verify that the Thermostat Mode is set to off prior to changing the schedule settings. To do this, tap **Mode** until the thermostat displays off.

1. Press and hold the thermostat's **Mode** and **Up** buttons until the displayed screen changes.
2. Press the **Next** arrow to select the menu option.
3. Press **Mode** until you reach option 12.
4. Press the up/down arrow to toggle to 1.
5. Press **Mode** until **Done** displays.

### To enable auto changeover in the CH-TSM10-WF:

1. Access the thermostat, and then press **Mode** to set the thermostat to off.
2. Press **Menu**, and then press and hold **Setup** until the screen changes.
3. The thermostat displays Installer Mode Enabled.
4. Press **Installer Setup** to enter the menu, and then press the right **Next** arrow to select the menu option.
5. Verify that the first menu item, 00, is set to Automation System.

- Use the up and down arrows to select option 12, and then press the up/down arrow to enable Auto Changeover.
- Press **Done** to save, and press it a second time to exit the menu.

## Configuring rules with Clare thermostats (optional)


### Notes


- The thermostat is auto-discovered by the ClareHome system, no Fusion configuration is necessary.
- This section is optional. It is not required to configure rules for the thermostat in Fusion.

Configure a rule for your thermostat. The example below shows how to set a rule that lowers the thermostat's temperature to 70 degrees at 8:30 every night.

### To create a rule for the Clare thermostat in Fusion:

- Access your project, and then click the **Rules** tab.

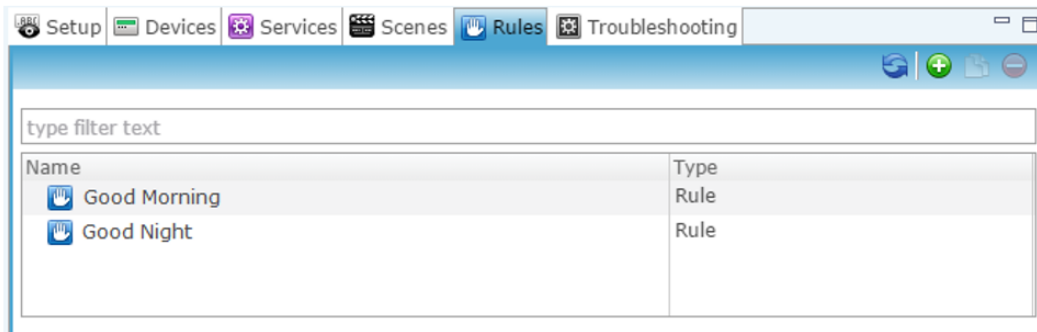

- Click the **New Rule** button .
- Enter a name for the rule, and then select the Enable Rule checkbox.



4. Configure the Event Part as below.

**Note:** Customize the options below to fit your desired schedule.


- **Event Type:** Timer Event
- **Run:** Everyday
- **At:** 8:30 PM
- **Starting at:** The desired start time and date
- **Until:** Forever

**Event Part**

Event Type:

Run:

at:  :  :   UTC

starting at:  :  :   on   UTC

until:

5. Configure the Action part as below.

- **Action Type:** Invoke Device Operation
- **Device:** The Clare thermostat
- **Function:** Heat Cool Temperature Actuator
- **Operation:** The desired heat/cool setpoints


**Action Part**

Action Type:

Device: [- Clare Thermostat](#)

Function:

Operation:

6. Click the **Save** button , and then deploy the project.

## Contact information

Clare Controls, LLC.  
7519 Pennsylvania Ave, Suite 104  
Sarasota, FL 34243

General: 941.328.3991  
Fax: 941.870.9646  
www.clarecontrols.com

Integrator/Dealer Support: 941.404.1072  
claresupport@clarecontrols.com

Homeowner Support (ClareCare): 941.315.2273 (CARE)  
help@clarecontrols.com