

GPD Capsule Filters

Pleated Polypropylene Depth Media



- 99.9% efficient at the rated pore size
- Protect critical membrane filters downstream
- Wide range of high efficiency retention ratings
- High capacity for long life

Applications

- ◆ Process Water
- ◆ Inks & Dyes
- ◆ Acids & Bases
- ◆ Chemicals
- ◆ Cosmetics

GPD capsules are made with polypropylene microfiber media. Designed with the maximum filtration area, the filters can remove large amounts of particulate and other contaminants over a long filter life. GPD capsules protect critical membrane filters downstream by removing 99.9% of contaminants at the rated pore size.

Applications for GPD general service grade capsule filters include removal of particulate contaminants from water, inks, dyes and specialty chemicals.

Polypropylene depth media filters perform the critical upstream clarification of products. When used in final filtration systems, the filters protect the high-value membrane filters used downstream. Polypropylene depth media capsule filters are rinsed during production to remove manufacturing debris from the capsules.

GPD Capsule Filters - Filtration Area*

Media	Capsule Length				
	2"	5"	10"	20"	30"
Pleated Polypropylene Depth	1.0 ft ² (0.093m ²)	2.8 ft ² (0.260m ²)	5.8 ft ² (0.539m ²)	11.6 ft ² (1.078m ²)	17.4 ft ² (1.617m ²)

*Average – Filtration area varies with media thickness and porosity.

Flow Rate / Filtration Area

The following table represents typical water flow at a one psi (69 mbar) pressure differential across a single 2 inch capsule with 1.0 ft² (0.093m²) of media with 1/2" FNPT ports. The liquid test fluid is water at ambient temperature. Higher pressure drops are acceptable, but as flows increase the pressure drop of the housing becomes more apparent.

Pore Size	0.10 μm	0.22 μm	0.45 μm	0.65 μm	1 μm	3 μm	5 μm	10 μm	20 μm	30 μm	40 μm	60 μm	100 μm
GPM	0.20	0.60	1.0	1.2	1.6	2.4	3.2	3.6	4.0	>4.0	>4.0	>4.0	>4.0
LPM	0.76	2.27	3.78	4.54	6.05	9.08	12.11	13.62	15.14	>15.14	>15.14	>15.14	>15.14

* For approximate flow rates for 5" through 30" capsules, refer to the appropriate cartridge data sheet

Construction Materials

Housing	Polypropylene
Filtration Media	Pleated Polypropylene Depth Media
Media Support	Polypropylene
End Caps	Polypropylene
Center Core	Polypropylene
Outer Support Cage	Polypropylene
Sealing Method	Thermal Bonding

Maximum Operating Parameters

Liquid Operational Pressure	80 psi (5.5 bar) at 20 °C (68 °F)
Gases Operational Pressure	60 psi (4.1 bar) at 20 °C (68 °F)
Operating Temperature	43 °C (110 °F) at 30 psi (2.1 bar) in water
Forward Differential Pressure	50 psid (3.4 bard) at 20 °C (68 °F)
Reverse Differential Pressure	40 psid (2.7 bard) at 20 °C (68 °F)
Recommended Changeout Pressure	35 psid (2.4 bard)

Sanitization/Sterilization

Autoclave 250° F (121° C), 30 min, 5+ cycles

Chemical Sanitization Industry standard concentrations of hydrogen peroxide, paracetic acid, sodium hypochlorite and other selected chemicals.

Note GPD capsules are not to be used in steam.

FDA and EC Compliance

All Critical Process Filtration capsule filters are designed to meet the FDA requirements for processing food and beverage products. The materials used to construct GPD capsule filters are listed by the FDA as appropriate for use in articles intended for repeated food contact as specified in Title 21 CFR sections 174.5, 177.1500, 177.1520, 177.1630, 177.2440 and 177.2600 as appropriate. The filters comply with Title 21 CFR sections 210.3 (b)(6) and 211.72, for non-fiber releasing filters. All materials used to make the filters are listed in European Commission Regulation EU/10/2011, Annex 1.

Ordering Information

Capsule order number example: General Service Grade Pleated Polypropylene Depth Media, 0.22 Micron Rating, Non-Sterile, 10" Length, Sanitary Inlet, Sanitary Outlet = CPGPD-20N0001FF.

Extractables

GPD capsule filters exhibit low levels of non-volatile residues.


Quality Assurance and Standards

Critical Process Filtration uses state of the art computer controlled equipment to consistently produce high quality products as well as significantly reduce hand operations that can compromise quality. All manufacturing and testing is continuously monitored in real time so that data can be quickly and easily analyzed to facilitate improvements in both quality and cost.

The Critical Process Filtration manufacturing and quality systems meet rigorous ISO 9001:2008 standards. Each operation, including assembly, testing, cleaning, drying and packaging, is done in an appropriately rated clean room. Manufacturing is controlled using a sophisticated manufacturing system that networks work stations, manufacturing centers and inspection points. During the manufacturing and inspection processes, data is collected in real time to allow continuous quality monitoring and full traceability of all materials and processes.

Total Performance

Critical Process Filtration, Inc. is a vertically integrated manufacturer of filtration products to industries in which filtration is considered a critical part of the manufacturing process. We supply a complete line of products and services to help you cost effectively satisfy all your filtration requirements from a single source.

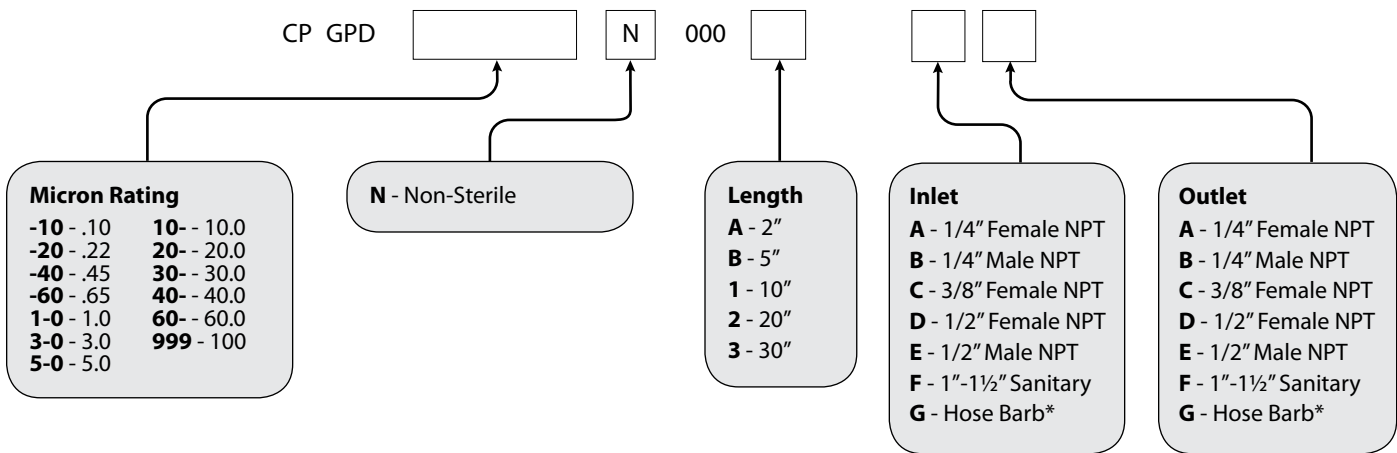

Hose Barb Diameter Ranges*

	Minimum	Maximum
Outer Diameters	11/32" (8.6mm)	9/16" (14.0mm)
Inner Diameters	5/32" (4.0mm)	13/32" (10.5mm)

Request a QUOTE from your area representative



Critical Process Filtration, Inc.

One Chestnut Street • Nashua, NH 03060

Tel: 603.880.4420 • Fax: 603.880.4536

criticalprocess.com • sales@criticalprocess.com

The information contained herein is subject to change without notice.

The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc.

Viton is a trademark of DuPont Performance Elastomers L.L.C.

© 1998-2016 Critical Process Filtration, Inc. • All Rights Reserved • Data Sheet CPGPDDS1011 RevA