

swampfox

Pump Station Controller
Models SF1 and SF3

Installation Guide


Wiring Practice to Comply with UL508A



Mounting

Mount *swampfox* against a flat surface using four M5 screws.

<u>Model</u>	<u>Screw Spacing</u>		<u>Outside Dimensions</u>	
	<u>Horizontal (A)</u>	<u>Vertical</u>	<u>Width (B)</u>	<u>Height</u>
SF1	153 mm	141 mm	175 mm	168 mm
SF3	217 mm	141 mm	240 mm	168 mm

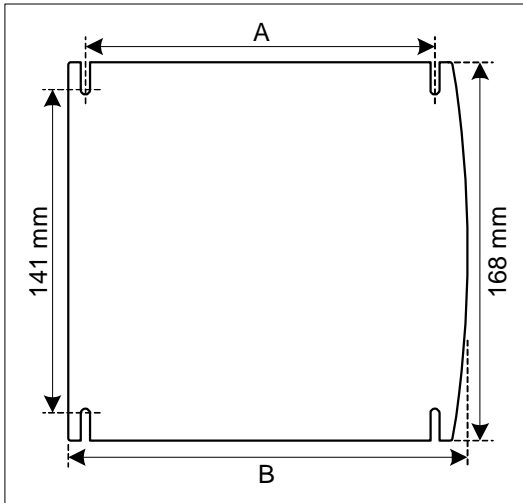


Mounting Template


Depth is 125mm, plus front clearance for wiring (at least 70mm for antenna jack)

Powering

<u>Arrangement</u>	<u>Voltage (nominal, min~max)</u>	<u>Rating</u>	<u>Apply Power to</u>	<u>Backup Battery</u>
24V DC	27.6V DC (24.0~36.0V DC)	48W	POWER	External
12V DC	13.8V DC (12.5~15.0V DC)	3A	EXT BATT/DC	Nil

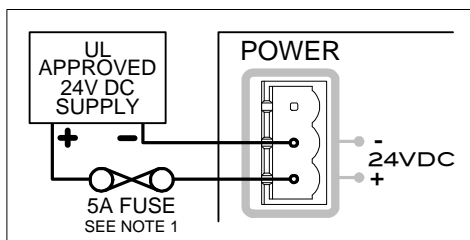

24V DC Supply

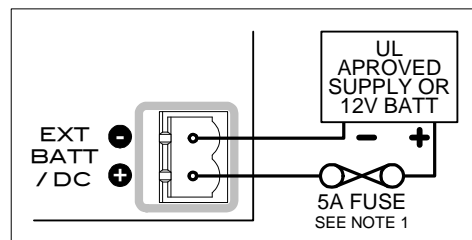

12V DC Supply

With the 12V DC powering arrangement, a 12V DC supply is fed into the **EXT BATT/DC** connector. This connection is also used to charge an external SLA battery when the *swampfox* is powered via the **POWER** connection. When the **POWER** connector is not used, the *swampfox*'s internal battery must be removed.

To meet the requirements of UL508A:


1. The *swampfox* RTU must use a UL certified external battery or DC supply and fused lead.
2. A caution label is to be installed on the control panel next to the fuses where applicable.




Connect an antenna before powering up *swampfox*

Digital Inputs

<u>General Description</u>	<u>Inactive, LED off</u>	<u>Active, LED on</u>	<u>Maximum</u>	<u>Resistance</u>
Positive voltage-activated	0~+1.8V	+4.5~36.0V	±60V DC	12kΩ to GND

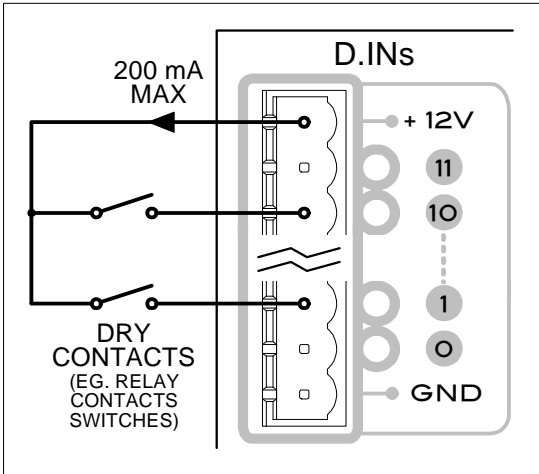


Digital Inputs – Internally Powered

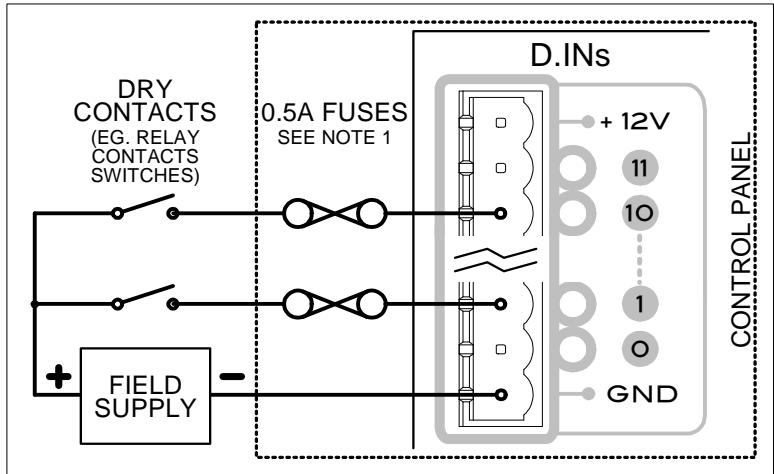

Digital Inputs – Externally Powered

By default Digital Inputs 0..3(, 12..15, 24..27 for SF3) are assigned to Pulse Counts or Rates 0..3(, 4..11 for SF3). If Microlink-compatible pulse input mapping is configured in Powerlink then Digital Inputs 9..6(, 21..18, 33..30) are mapped to Pulses or Rates 0..3(, 4..11).

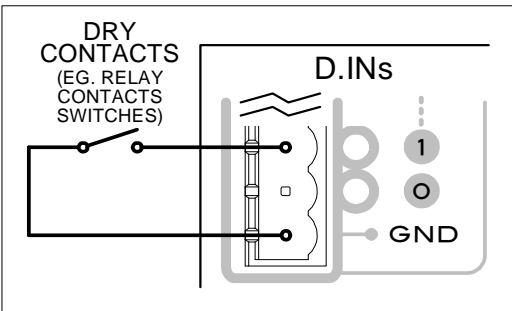


Digital Inputs – Internal Pullup

For RTUs with a **-d** suffix, the Digital Inputs are internally pulled up to the 12V rail.


The are activated by pulling the input to **GND** via a switch or relay contact.

Analog Inputs

<u>General Description</u>	<u>Inactive, LED off</u>	<u>Active, LED on</u>	<u>Maximum</u>	<u>Resistance</u>
Positive 4~20mA current	0~+4mA	+4~20mA	±5V ±40mA	120Ω to GND

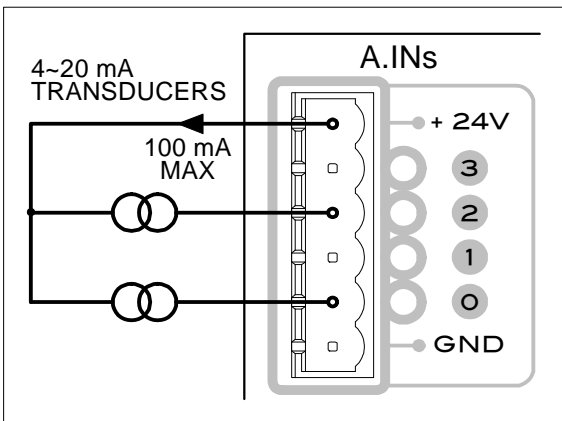


Analog Inputs – Internally Powered

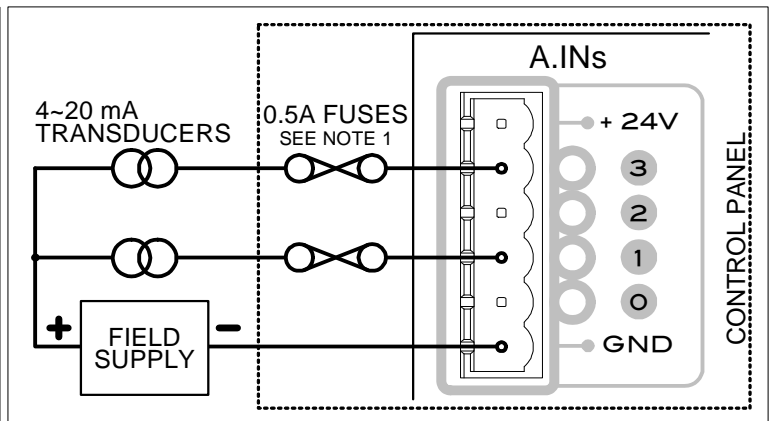

Analog Inputs – Externally Powered

Digital Outputs

Open-collector type outputs which close to **GND** when activated. Each can switch and carry up to 100mA from a supply of up to +40V DC.

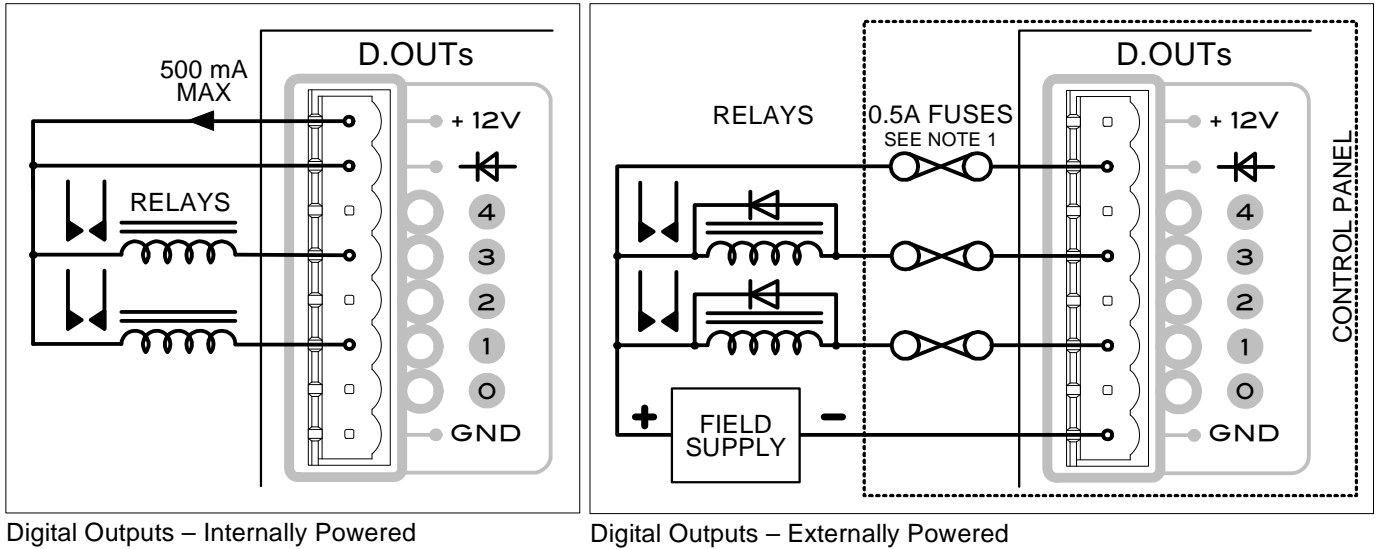


The pin with the diode symbol must be connected to the positive rail from which any inductive loads are powered, to protect *swampfox* against back EMF.

Any externally powered relays must also be fitted with a back EMF diode across the coil.

Security I/O

The fail-safe alarm is an open collector, which can carry 50mA, up to 30V, and can drive a relay coil directly. This output must also be fused if connected to a relay that is mounted external to the control panel.

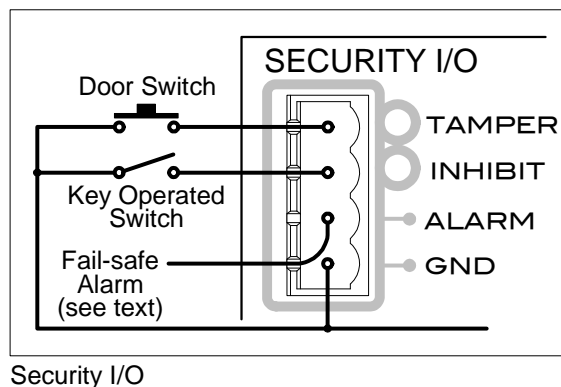

Serial Ports

Name	Type	Socket	Typically used for...
PORT 1	RS-232	RJ-45 ⁽¹⁾	Local connection to PLC, data logger, meter
PORT 2	RS-232	RJ-45	Local connection to PLC, data logger, meter
CONFIG	RS-232	RJ-45	Laptop, Analog output module

⁽¹⁾ Connector pins 2 and 3 are not connected on **PORT 1**.

⁽²⁾ The +12V outputs can power small loads such as serial converters.

Each port has a red/green LED indicator, which blinks green when *swampfox* receives a valid message. Red indicates an error condition.

	Dir	Name
1	sf→	+12V ⁽²⁾
2 ⁽¹⁾	sf→	COut2
3 ⁽¹⁾	sf←	CIn2
4	sf→	COut1
5	sf←	CIn1
6	sf→	TxD
7	sf←	RxD
8		GND




Serial ports can be permanently damaged if an Ethernet cable is plugged into them.

Ethernet Port

This is a standard 100-base-T Ethernet port, which is operational when the appropriate firmware is installed.

External Radio Connections

These connections are applicable only when no internal radio is fitted.

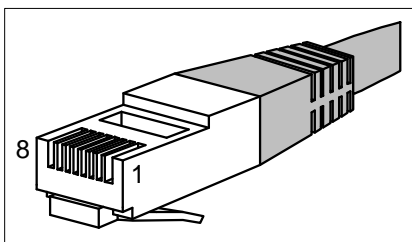

RJ45 Pins

Pin	Dir	Name
1		GND
2	sf→	PTT
3	sf←	Channel Busy
4	sf→	Tx Audio
5	sf←	Rx Audio
6	sf→	Serial TxD
7	sf←	Serial RxD
8		GND

Always use best radio-frequency engineering practices for all radio and antenna installation.




Connect an antenna before powering up *swampfox*

Speaker / Microphone Connections

A suitable Speaker / Microphone connection is provided on units with an internal radio for monitoring and testing the radio channel.

<u>Pin</u>	<u>Name</u>
1	N/C
2	Speaker
3	PTT
4	Microphone
5	GND
6	GND

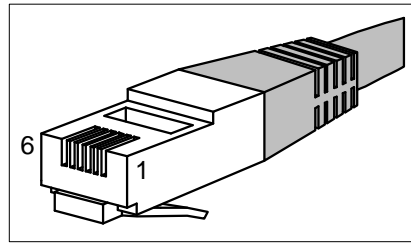

RJ12 Speaker Mic Pins

Communication Indicators

The **COMMS** indicators show communication between *swampfox* and the Telemetry Master.

<u>Indicator</u>	<u>Indication</u>	<u>Meaning</u>
VAD/COMMS	Green short blink	A valid message for a <i>different</i> RTU was received
	Green long blink	A valid message for <i>this</i> RTU was received
	Red	Comms fail (no comms with the Master)
CHAN BUSY	Yellow	The radio transceiver is receiving RF on it's channel
RX DATA	Yellow	Shows the data being received by <i>swampfox</i>
PTT	Yellow	<i>swampfox</i> is transmitting on the radio channel
TX DATA	Yellow	Shows the data being transmitted by <i>swampfox</i>

A short blink is about 0.1 seconds. A long blink is about 0.5 seconds.

Ready LED and Reset

<u>Ready LED indication</u>	<u>swampfox operating state</u>
Green	Normal <i>swampfox</i> is operating normally
Red	Defect Hardware or firmware fault

The **RESET** button is behind a small unmarked hole in the front panel near the **DISPLAY** button. To reset and restart *swampfox*, press **RESET** briefly.

Mains and Battery LEDs

The *swampfox*'s internal battery charger charges the internal battery, or an external 12V sealed lead acid battery (6Ah or more) connected to the **EXT BATT/DC** connector. While power is present, the **MAINS** and **BATT** indicators show *swampfox*'s state:

<u>Mains LED</u>	<u>Battery LED</u>	<u>swampfox power, charger and battery status</u>	
Green	Green	Normal	POWER energized, battery OK, not charging
Red	Green	Backup	POWER not energized, running from battery
Either	Red	Battery Low	Battery voltage low (or battery disconnected)
Unlit	Green	12V Powered	Powered through EXT BATT/DC
Green	Green flashing	Charging	
Green	Red flashing	Charge Failure	Mains failed while charging, or faulty battery

Other Front Panel Items

The **DISPLAY** button turns the front panel indicators on and off. The ready LED is always enabled.

The **ADDRESS SWITCHES** set *swampfox*'s three digit RTU address.



***swampfox* only examines the address switches when it starts up or is reset**

All **GND** pins, the **EXT BATT/DC** connector negative pin, and the antenna shield, are all connected inside the *swampfox*.

Note 1: Sample of label to be fitted next to fuses on control panel.



CAUTION - To reduce the risk of fire, replace only with same type and rating of fuse.

Copyright © 2006-2012 Abbey Systems Ltd

www.abbey.co.nz

support@abbey.co.nz

Level 3, 220 Willis Street
PO Box 27-497
Wellington, New Zealand
Phone +64-4-385-6611
Fax +64-4-3856848

Document Number	IG-688-1.0-2012-May
Products Covered	SF1 and SF3 (-E Variants Only)
Revision Number	1.0
Revision date	7 May 2012

swampfox and the *swampfox* logo are trademarks of
Abbey Systems Ltd, registered with the U.S. Patent and Trademark Office.
UL and the UL logo are trademarks of UL LLC

