


Venting of the interceptor is recommended by and required for indoor installations.

- Vent the grease interceptor on the inlet side. It is also recommended to vent the outlet side of the grease interceptor right after the outlet.

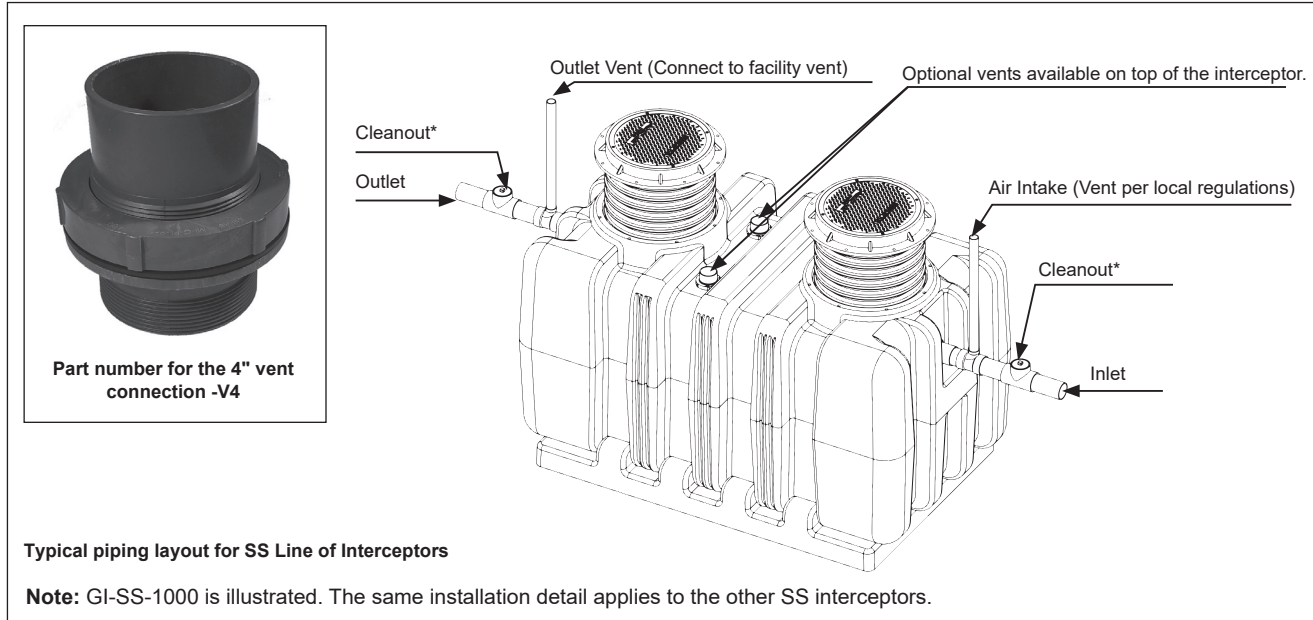

INTERCEPTOR PLACEMENT

The interceptor should be visible and easily accessible for maintenance and inspection. The SS model can be installed in a basement, suspended from a ceiling or in-ground in an exterior location. Ensure that adequate room is provided around the interceptor to allow easy access for a pump truck operator. Ensure that the height above the SS model access cover is enough to properly service the interceptor.

INLET/OUTLET PIPING

The inlet and outlet piping connections require no hub pipe couplings. (See T&C Series of no hub couplings.) Keep outlet piping as straight as possible. T&C recommends installation of 4" (102 mm) cleanouts on both the Inlet and Outlet of 4" for the SS Interceptors and Solids Interceptors in accordance with all applicable laws, regulations and codes. Use only "sweep" connections. Do not reduce the pipe sizing on the outlet piping. Do not install a "P" trap on the outlet connection of system. (Note: The system already has an internal gas trap.)

FLOW CONTROLS

SS model interceptors are supplied with a stainless steel calibrated orifice plate (internal flow control). An external, vented, flow control fitting is required to be installed before the inlet of the grease interceptor to meet the P.D.I. G-101.

VENTING THE OUTLET

An outlet vent or approved air admittance valve of at least 1/2 the diameter of the interceptor's outlet connection must be installed as close as possible to the SS outlet to prevent possible siphonage problems. The vent on the outlet piping is to be installed in accordance with all applicable laws, regulations and codes. Failure to provide a vent for the interceptor voids the Warranty for the system.

RECOMMENDED EXCAVATION, BACKFILLING, AND FINISHING FOR FOR THE SUPERMAX® INTERCEPTORS

- Install the interceptor(s) as close as practical to the fixtures being served.
- The excavation must be a minimum of 12" greater on all sides of the tank.
- The depth of the excavation must be greater than 6" on the bottom of the interceptor.
- Fill the interceptor with water prior to backfilling in order to prevent the interceptor from floating.
- Fully install the double wall corrugated pipe and lid prior to backfilling.
- Concrete or finishing material requirements are to be determined by the specifying engineer.
- Encase the interceptor in well-packed 3/4" rock, or sand.
- To prevent float out: the Anchor kit is recommended for installations in high water table conditions. This is to be determined by the specifying engineer.

Note: Drawings are for reference only. Equipment must be installed in compliance with all applicable laws, regulations and codes, including plumbing codes. Installation should be done by a licensed plumber.