





TRENTON Technology Inc.
 2350 Centennial Drive • Gainesville, Georgia 30504
 Sales (800) 875-6031 • Phone (770) 287-3100 • Fax (770) 287-3150

Technical Information – Jumpers and Connectors BPX6620 (6620) Server-Class PCI Express Backplane

Block Diagram

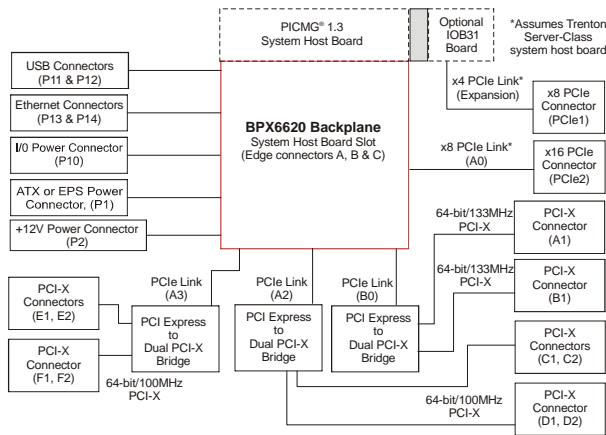

Layout Diagram – 6620

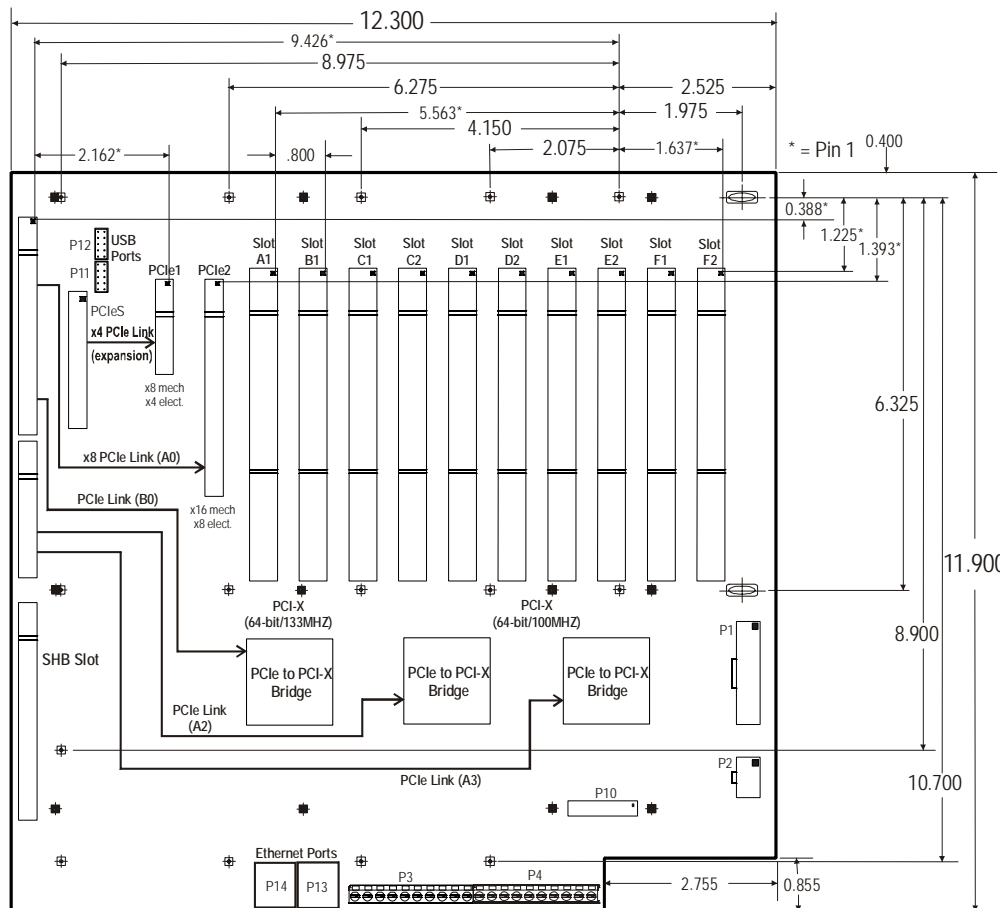

- Trenton Hole Pattern
- PICMG 1.3 Hole Pattern

- Notes:
- *IOB31 required to provide PCI Express link to PCle1 slot
 - **Optional USB and Ethernet connectivity provided by PICMG 1.3 SHB. Not all SHBs support this capability.
 - Connector spacing: 0.800"
 - Nominal PCB thickness: .080"
 - Mounting holes: .156" diameter
 - Connectors are populated based on model.
 - Some holes are common to both hole patterns
 - All dimensions are inches.



BPX6620 (6620) Configuration Jumper

The setup of the configuration jumper on the backplane is described below. * indicates the default value of the jumper.

NOTE: For the two-position jumper (3-post), “TOP” and “BOTTOM” refer to positioning when the backplane is viewed with the slots at the top end of the backplane.

<u>Jumper</u>	<u>Description</u>
JU4	<p>+5V Auxiliary Voltage</p> <p>Install on the TOP if +5V auxiliary voltage is provided by the standard +5V supply. This option is used for systems which do not have either an ATX or EPS standard power input. This mode provides the necessary +5V for the SHB’s +5VAUX signal lines. Sleep mode recovery is not supported using non-ATX/EPS power supplies.</p> <p>Install on the BOTTOM if +5V auxiliary voltage is provided by a separate +5VAUX signal input pin. This enables the necessary SHB power signaling and allows recovery from sleep mode. This option is used for ATX or EPS standard power supplies. *</p>

BPX6620 (6620-004) Connectors

The connectors available on the BPX6620 vary depending on the version of the backplane you have. Connectors for the 6620-004 (-EPS) and 6620-007 (-CRA) are defined below.

NOTE: Pin 1 on the connectors is indicated by the square pad on the PCB.

P1 - ATX/EPS Power Connector
 24 pin dual row header, Molex #44206-0007

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Gnd	15	Gnd
4	+5V	16	PSON#
5	Gnd	17	Gnd
6	+5V	18	Gnd
7	Gnd	19	Gnd
8	PWRGD	20	-5V
9	+5VAUX	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Gnd



BPX6620 (6620-004) Connectors (continued)

P2 - +12V Power Connector

8 pin dual row header, Molex #44206-0005

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	Gnd	5	+12V
2	Gnd	6	+12V
3	Gnd	7	+12V
4	Gnd	8	+12V

P3 - Terminal Block Connector

10 position terminal block, Amp #1-796949-0

20 Amps per circuit

<u>Pin</u>	<u>Signal</u>
1	+12V
2	+12V
3	+12V
4	+12V
5	Gnd
6	Gnd
7	Gnd
8	Gnd
9	+5V
10	+5V

P4 - Terminal Block Connector

10 position terminal block, Amp #1-796949-0

20 Amps per circuit

<u>Pin</u>	<u>Signal</u>
1	+3.3V
2	+3.3V
3	+3.3V
4	+3.3V
5	Gnd
6	Gnd
7	Gnd
8	Gnd
9	Gnd
10	Gnd

P6 - Power-On Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PERSON#
2	Gnd

P7 - Power Button Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PWRBT#
2	Gnd



BPX6620 (6620-004) CONNECTORS (CONTINUED)

P8 - Reset Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	SHB_RST#
2	Gnd

P9 - Power Good Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PWRGD
2	Gnd

P10 - I/O Power Connector

20 pin dual row header, Molex #87831-2020

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	Gnd	2	+12V
3	IPMB_DA	4	Gnd
5	IPMB_CL	6	+5V
7	SMDAT	8	+5VAUX
9	SMCLK	10	+3.3V
11	PWRBT#	12	PSON#
13	Gnd	14	SHB_RST#
15	PWRGD	16	+5VAUX_IN
17	Gnd	18	+5VAUX_IN
19	Gnd	20	-12V

P11 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801

(+5V fused with self-resetting fuses)

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+5V-USB0	2	+5V-USB1
3	USB0-	4	USB1-
5	USB0+	6	USB1+
7	Gnd-USB0	8	Gnd-USB1

P12 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801

(+5V fused with self-resetting fuses)

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+5V-USB2	2	+5V-USB3
3	USB2-	4	USB3-
5	USB2+	6	USB3+
7	Gnd-USB2	8	Gnd-USB3



BPX6620 (6620-004) CONNECTORS (CONTINUED)

- P13 - 10/100/1000Base-T Ethernet Connector - LAN 0**
8 pin shielded RJ-45 connector, Molex #85508-0001

<u>Pin</u>	<u>Signal</u>
1	TRP1+
2	TRP1-
3	TRP2+
4	TRP3+
5	TRP3-
6	TRP2-
7	TRP4+
8	TRP4-

- P14 - 10/100/1000Base-T Ethernet Connector - LAN 1**
8 pin shielded RJ-45 connector, Molex #85508-0001

<u>Pin</u>	<u>Signal</u>
1	TRP1+
2	TRP1-
3	TRP2+
4	TRP3+
5	TRP3-
6	TRP2-
7	TRP4+
8	TRP4-

- P19 - System Management Bus Connector**
2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	SMB Clock
2	SMB Data

BPX6620 (6620-007) Connectors

NOTE: Pin 1 on the connectors is indicated by the square pad on the PCB.

- P1 - ATX/EPS Power Connector**
24 pin right angle dual row mini fit JR, Molex #35318-2420

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Gnd	15	Gnd
4	+5V	16	PSON#
5	Gnd	17	Gnd
6	+5V	18	Gnd
7	Gnd	19	Gnd
8	PWRGD	20	-5V
9	+5VAUX	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Gnd



BPX6620 (6620-007) Connectors (continued)

P2 - +12V Power Connector

8 pin right angle mini fit JR, Molex #35318-0820

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	Gnd	5	+12V
2	Gnd	6	+12V
3	Gnd	7	+12V
4	Gnd	8	+12V

P3 - Terminal Block Connector

10 position terminal block, Amp #1-796949-0

20 Amps per circuit

<u>Pin</u>	<u>Signal</u>
1	+12V
2	+12V
3	+12V
4	+12V
5	Gnd
6	Gnd
7	Gnd
8	Gnd
9	+5V
10	+5V

P4 - Terminal Block Connector

10 position terminal block, Amp #1-796949-0

20 Amps per circuit

<u>Pin</u>	<u>Signal</u>
1	+3.3V
2	+3.3V
3	+3.3V
4	+3.3V
5	Gnd
6	Gnd
7	Gnd
8	Gnd
9	Gnd
10	Gnd

P6 - Power-On Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PERSON#
2	Gnd

P7 - Power Button Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PWRBT#
2	Gnd



BPX6620 (6620-007) Connectors (continued)

P8 - Reset Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	SHB_RST#
2	Gnd

P9 - Power Good Connector

2 pin single row header, Amp #640456-2

<u>Pin</u>	<u>Signal</u>
1	PWRGD
2	Gnd

P10 - I/O Power Connector

20 pin dual row header, Molex #87831-2020

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	Gnd	2	+12V
3	IPMB_DA	4	Gnd
5	IPMB_CL	6	+5V
7	SMDAT	8	+5VAUX
9	SMCLK	10	+3.3V
11	PWRBT#	12	PSON#
13	Gnd	14	SHB_RST#
15	PWRGD	16	+5VAUX_IN
17	Gnd	18	+5VAUX_IN
19	Gnd	20	-12V

P11 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801

(+5V fused with self-resetting fuses)

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+5V-USB0	2	+5V-USB1
3	USB0-	4	USB1-
5	USB0+	6	USB1+
7	Gnd-USB0	8	Gnd-USB1

P12 - Universal Serial Bus (USB) Connector

8 pin dual row header, Molex #702-46-0801

(+5V fused with self-resetting fuses)

<u>Pin</u>	<u>Signal</u>	<u>Pin</u>	<u>Signal</u>
1	+5V-USB2	2	+5V-USB3
3	USB2-	4	USB3-
5	USB2+	6	USB3+
7	Gnd-USB2	8	Gnd-USB3



BPX6620 (6620-007) Connectors (continued)

- P13 - 10/100/1000Base-T Ethernet Connector - LAN 0**
 8 pin shielded RJ-45 connector, Molex #85508-0001
- | <u>Pin</u> | <u>Signal</u> |
|------------|---------------|
| 1 | TRP1+ |
| 2 | TRP1- |
| 3 | TRP2+ |
| 4 | TRP3+ |
| 5 | TRP3- |
| 6 | TRP2- |
| 7 | TRP4+ |
| 8 | TRP4- |

- P14 - 10/100/1000Base-T Ethernet Connector - LAN 1**
 8 pin shielded RJ-45 connector, Molex #85508-0001
- | <u>Pin</u> | <u>Signal</u> |
|------------|---------------|
| 1 | TRP1+ |
| 2 | TRP1- |
| 3 | TRP2+ |
| 4 | TRP3+ |
| 5 | TRP3- |
| 6 | TRP2- |
| 7 | TRP4+ |
| 8 | TRP4- |

- P19 - System Management Bus Connector**
 2 pin single row header, Amp #640456-2
- | <u>Pin</u> | <u>Signal</u> |
|------------|---------------|
| 1 | SMB Clock |
| 2 | SMB Data |

Trenton SHB Optional Backplane I/O Support For the BPX6620

TRENTON SHB	ETHERNET			USB							
	LAN0	LAN1	LAN2	USB0	USB1	USB2	USB3	USB4	USB5	USB6	USB7
NLT/NLI ¹	-	-	n/a	-	-	X	X	n/a	n/a	n/a	n/a
SLT/SLI ¹	-	-	n/a	-	-	X	X	n/a	n/a	n/a	n/a
MCX-series ²	-	-	X	-	-	-	-	X	X	X	X

¹ Requires factory build option.

² LAN2 is a 10/100/1000BASE-T Ethernet interface when using a MCX-series SHB

Note: The letter X indicates an interface connection routed to SHB edge connector C for use on the backplane