



Technical Information – Compatible Backplanes, Jumpers, Connectors and Memory THD8141 (8141-xxx) Single-Processor, PICMG 1.3 System Host Board

Layout Diagram – Top

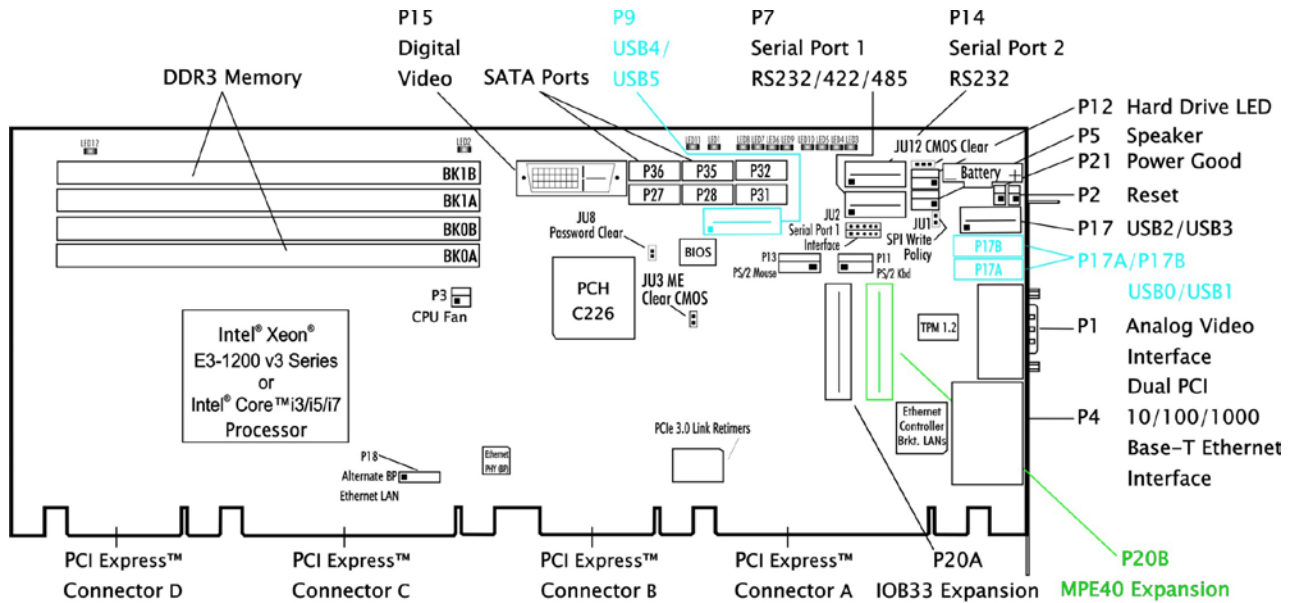

Layout Diagram – Bottom

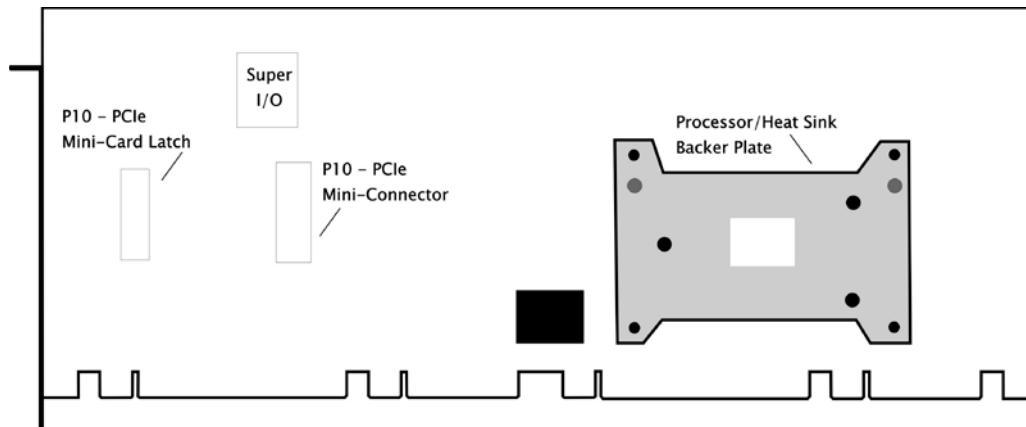

Jumpers & LEDs

The setup of the configuration jumpers on the SHB is described below. An asterisk (*) indicates the default value of each jumper.

NOTE: For the three-position JU12 jumper, "RIGHT" is toward the I/O bracket side of the board; "LEFT" is toward the header connector P14.


JU1 SPI Update (two position jumper)

Install for one power-up cycle to enable the board to unprotect the SHB's SPI storage device.
Remove for normal operation. *

CAUTION: Installing this jumper is only done for special board operations such as changing the PCI Express link bifurcation operation. Contact Trenton tech support before installing this jumper to prevent any unintended system operation.

JU2 Serial Port 1 Interface Configuration

JU2 uses five jumpers to allow serial port one to be configured as either a RS232 or a RS422/RS485 electrical interface. The jumper tables below illustrate the possible interface configurations for serial port one.

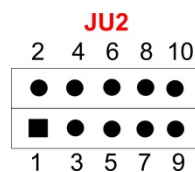

RS232 operation* – Jumper 1 to 2 **and** 3 to 4 **and** 9 to 10
 RS485 Full Duplex, No Termination – Jumper 1 to 2 **and** 9 to 10¹
 RS485 Half Duplex, No Termination – Jumper 9 to 10
 RS485 Full Duplex, With Termination – Jumper 1 to 2 **and** 5 to 6²
 RS485 Half Duplex, With Termination – Jumper 5 to 6 **and** 9 to 10

Notes:

- 1 – Shut between pins 9 and 10 can optionally be removed to unconditionally enable the Tx driver
- 2 – Shut between pins 9 and 10 can optionally be installed to unconditionally enable the Tx driver

JU3 Clear Management Engine (ME) Operational Parameters (two position jumper)

The board's management engine has its own CMOS Non-Volatile Memory (NVM) that stores operational parameters for Intel AMT 9.0 implementations.

Install for one power-up cycle to clear management engine CMOS settings.
Remove for normal operation. *

JU8 Password Clear (two position jumper)

Install for one power-up cycle to reset the password to the default (null password).
Remove for normal operation. *

JU12 CMOS Clear (three position jumper)

Install on the LEFT to clear.
Install on the RIGHT to operate. *

NOTE: To clear the CMOS, power down the system and install the JU12 jumper on the LEFT. Wait for at least two seconds, move the jumper back to the RIGHT and turn the power on. Clearing CMOS on the THD8141 will not result in a checksum error on the following boot. If you want to change a BIOS setting, you must press DEL or the F2 key during POST to enter BIOS setup after clearing CMOS.

Status LEDs

P4A/P4B Ethernet LEDs

The I/O bracket houses the two RJ-45 network connectors for Ethernet LAN1 and LAN2. Each LAN interface connector has two LEDs that indicate activity status and Ethernet connection speed. Listed below are the possible LED conditions and status indications for each LAN connector:

| LED/Connector | Description |
|--------------------------|--|
| Activity LED | Green LED indicates network activity. This is the upper LED on the LAN connector (i.e., toward the upper memory sockets). |
| Off | No current network transmit or receive activity |
| On (flashing) | Indicates network transmit or receive activity. |
| Speed LED | This multi-color LED identifies the connection speed of the SHB's P4A (LAN2) and P4B (LAN1) Ethernet interfaces. These are the lower LEDs on the dual LAN connector (i.e., toward the edge connectors). |
| Green | Indicates a valid link at 1000-Mb/s or 1Gb/s |
| Orange | Indicates a valid link at 100-Mb/s. |
| Off | Indicates a valid link at 10-Mb/s |
| RJ-45 Network Connectors | The RJ-45 network connector requires a Connectors category 5 (CAT5) unshielded twisted-pair (UTP) 2-pair cable for a 100-Mb/s network connection or a category 3 (CAT3) or higher UTP 2-pair cable for a 10-Mb/s network connection. A category 5e (CAT5e) or higher UTP 2-pair cable is recommended for a 1000-Mb/s (Gigabit) network connection. |

LED8 - Backplane LAN LED (Labeled LED2 on Rev0 boards)

LED8 is located just above the right side of memory DIMM connector BK1B. A flashing LED8 indicates that network transmit and receive activity is occurring on the Ethernet LAN routed to the board's edge connector C / cable connector P18. This LAN provides a network interface for use on a compatible PICMG 1.3 backplane or over a cable.

LED9 - Thermal Trip LED (Labeled LED11 on Rev0 boards)

The thermal trip LED indicates when a processor reaches a shut down state. The LED is located just above the SATA connector P28. LED9 indicates the processor shutdown status and thermal conditions as illustrated below:

| LED Status | Description |
|-------------------|--|
| Off | Indicates the processor or processors are operating within acceptable thermal levels. |
| On (flashing) | Indicates a CPU is throttling down to a lower operating speed due to rising CPU temperature. |
| On (solid orange) | Indicates the CPU has reached the thermal shutdown threshold limit. The SHB may or may not be operating, but a board shutdown condition will soon occur. |

NOTE: When a thermal shutdown occurs, the LED will stay on in systems using non- ATX/EPs power supplies. The CPU will cease functioning, but power will still be applied to the SHB. In systems with ATX/EPs power supplies, the LED will turn off when a thermal shutdown occurs because system power is removed via the ACPI soft control power signal S5. In this case, all SHB LEDs will turn off; however, stand-by power will still be present.

Status LEDs (continued)

LED 10 - PCIe Mini Card WLAN LED (Labeled LED1 on Rev0 boards)

When LED10, located just to the right of LED9, is flashing this indicates that network transmit and receive activity is occurring on an Ethernet LAN that is located on an optional PCIe Mini Card connected to the THD8141's Mini PCIe Expansion connector P10. P10 is located on the bottom side of the SHB.

LED11 - VRM LED (Labeled LED12 on Rev0 boards)


LED11 is a red LED located just above the left side of memory DIMM connector BK1B. If LED11 were to turn on and remain on, this would indicate that the voltage levels of the SHB's VRM circuits are not within the acceptable operating range. In all likelihood the SHB will fail to function if LED11 is on and the source of the voltage error could reside in the system power supply, the power supply wiring or on the board itself. Contact your system integrator or Trenton Tech Support for trouble shooting assistance.

POST Code LEDs 0 - 7 (Labeled LEDs 1-8 on Rev0 boards)

As the POST (Power On Self Test) routines are performed during boot-up, test codes are displayed on Port 80 POST Code LEDs 0, 1, 2, 3, 4, 5, 6 and 7. These LEDs are located on the top of the SHB, just above the board's SATA connectors and slightly toward the right. The POST Code LEDs are numbered from right (position 1 = LED0) to left (position 8 = LED7). Refer to the board layout diagram for the exact location of the POST code LEDs.

These POST codes may be helpful as a diagnostic tool. Specific test codes are listed in Appendix A - BIOS Messages section of the THD8141 Technical Reference Manual. After a normal POST sequence the LEDs are off (00h) indicating that the SHB's BIOS has passed control over to the operating system loader typically at interrupt INT19h. The chart is from Appendix A and can be used to interpret the LEDs into hexadecimal format during POST.

| Upper Nibble (UN) | | | | | Lower Nibble (LN) | | | | |
|-------------------|------|------|------|------|-------------------|------|------|------|------|
| Hex. Value | LED7 | LED6 | LED5 | LED4 | Hex. Value | LED3 | LED2 | LED1 | LED0 |
| 0 | Off | Off | Off | Off | 0 | Off | Off | Off | Off |
| 1 | Off | Off | Off | On | 1 | Off | Off | Off | On |
| 2 | Off | Off | On | Off | 2 | Off | Off | On | Off |
| 3 | Off | Off | On | On | 3 | Off | Off | On | On |
| 4 | Off | On | Off | Off | 4 | Off | On | Off | Off |
| 5 | Off | On | Off | On | 5 | Off | On | Off | On |
| 6 | Off | On | On | Off | 6 | Off | On | On | Off |
| 7 | Off | On | On | On | 7 | Off | On | On | On |
| 8 | On | Off | Off | Off | 8 | On | Off | Off | Off |
| 9 | On | Off | Off | On | 9 | On | Off | Off | On |
| A | On | Off | On | Off | A | On | Off | On | Off |
| B | On | Off | On | On | B | On | Off | On | On |
| C | On | On | Off | Off | C | On | On | Off | Off |
| D | On | On | Off | On | D | On | On | Off | On |
| E | On | On | On | Off | E | On | On | On | Off |
| F | On | On | On | On | F | On | On | On | On |

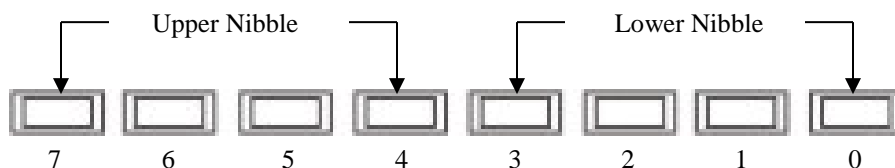

THD8141 POST Code LEDs
(Labeled 1 through 8 on Rev0 boards)

Connectors

NOTE:

A connectors square solder pad located on the bottom side of the PCB indicates pin 1.

P1 – Analog Video Connector

15-socket analog video connector, Amp/TYCO 1-1734530-3:

| PIN | SIGNAL | PIN | SIGNAL |
|-----|--------|-----|--------|
| 1 | Red | 9 | +5V |
| 2 | Green | 10 | Gnd |
| 3 | Blue | 11 | NC |
| 4 | NC | 12 | EEDI |
| 5 | Gnd | 13 | HSYNC |
| 6 | Gnd | 14 | VSYNC |
| 7 | Gnd | 15 | EECS |
| 8 | Gnd | | |

Note: Video connector supports standard analog video cables

P2 - Reset Connector

2 pin single row header, Amp #640456-2

| PIN | SIGNAL |
|-----|----------|
| 1 | Gnd |
| 2 | Reset In |

P3 – CPU Fan Power Connector

3 pin single row header, Molex #22-23-2031

| PIN | SIGNAL |
|-----|----------|
| 1 | Gnd |
| 2 | +12V |
| 3 | Fan Tach |

Note: P2 is the fan connector for CPU2 and P19 is for CPU1

P11 – PS/2 Keyboard Header

5 pin single row header, Amp #640456-5

| PIN | SIGNAL |
|-----|--|
| 1 | Kbd Clock |
| 2 | Kbd Data |
| 3 | NC |
| 4 | Kbd Gnd |
| 5 | Kbd Power (+5V fused) with self resetting fuse |

P12 – Hard Drive LED Connector

4 pin single row header, Amp #640456-4

| PIN | SIGNAL |
|-----|--------|
| 1 | LED + |
| 2 | LED - |
| 3 | LED - |
| 4 | LED + |

P13 – PS/2 Mouse Header

6 pin single row header, Amp #640456-6

| PIN | SIGNAL |
|-----|---|
| 1 | Ms Data |
| 2 | NC |
| 3 | Gnd |
| 4 | Ms Power (+5V fused) with self resetting fuse |
| 5 | Ms Clock |
| 6 | NC |

P21 – Power Good LED

2 pin single row header, Amp #640456-2

| PIN | SIGNAL |
|-----|--------|
| 1 | LED - |
| 2 | LED + |

Connectors (continued)

P4A/P4B – Dual 10/100/1000Base-T Ethernet Connector - LAN1 and LAN2

RJ-45/Dual connector, Pulse #JG0-0024NL

Each individual RJ-45 connector is defined as follows:

| PIN | SIGNAL | PIN | SIGNAL |
|-----|----------|-----|----------|
| 1A | L2_MDI0n | 1B | L1_MDI0n |
| 2A | L2_MDI0p | 2B | L1_MDI0p |
| 3A | L2_MDI1n | 3B | L1_MDI1n |
| 4A | L2_MDI1p | 4B | L1_MDI1p |
| 5A | L2_MDI2n | 5B | L1_MDI2n |
| 6A | L2_MDI2p | 6B | L1_MDI2p |
| 7A | L2_MDI3n | 7B | L1_MDI3n |
| 8A | L2_MDI3p | 8B | L1_MDI3p |
| 9A | VCC_1.8V | 9B | VCC_1.8V |
| 10A | GND_A | 10B | GND_b |

Notes:

1 – LAN ports support standard CAT5 Ethernet cables

2 – P4A is LAN2 and P4B is LAN1

P5 - Speaker Port Connector

4 pin single row header, Amp #640456-4

| PIN | SIGNAL |
|-----|--------------|
| 1 | Speaker Data |
| 2 | NC |
| 3 | Gnd |
| 4 | +5V |

P7 – Serial Port 1 Connector – RS232 Connections

10 pin dual row header, Amp #5103308-1

| PIN | SIGNAL | PIN | SIGNAL |
|-----|-----------------------|-----|-------------------|
| 1 | Carrier Detect | 2 | Data Set Ready-I |
| 3 | Receive Data-I | 4 | Request to Send-O |
| 5 | Transmit Data-O | 6 | Clear to Send |
| 7 | Data Terminal Ready-O | 8 | Ring Indicator-I |
| 9 | Gnd | 10 | NC |

Note: See JU2 pin-puts listed in the Jumpers & LEDs section on this document to enable serial port 1 signal connections.

P14 – Serial Port 2 Connector – RS232 Connections

10 pin dual row header, Amp #5103308-1

| PIN | SIGNAL | PIN | SIGNAL |
|-----|-----------------------|-----|-------------------|
| 1 | Carrier Detect | 2 | Data Set Ready-I |
| 3 | Receive Data-I | 4 | Request to Send-O |
| 5 | Transmit Data-O | 6 | Clear to Send |
| 7 | Data Terminal Ready-O | 8 | Ring Indicator-I |
| 9 | Gnd | 10 | NC |

P15 – Digital Video Connector (DVI-D)

24-socket digital video connector, Molex #0743205004

| PIN | SIGNAL | PIN | SIGNAL | PIN | SIGNAL |
|-----|----------|-----|----------|-----|----------|
| 1 | DVI_TX2N | 9 | DVI_TX1N | 17 | DVI_TX0N |
| 2 | DVI_TX2P | 10 | DVI_TX1P | 18 | DVI_TX0P |
| 3 | Gnd | 11 | Gnd | 19 | Gnd |
| 4 | NC | 12 | NC | 20 | NC |
| 5 | NC | 13 | NC | 21 | NC |
| 6 | DVI_SCLK | 14 | 5V | 22 | Gnd |
| 7 | DVI_SDAT | 15 | Gnd | 23 | DVI_TXCP |
| 8 | NC | 16 | DVI_HPD | 24 | DVI_TXCN |

Note: Video connector supports standard DVI-D digital video cables

P17 – Dual Universal Serial Bus (USB) Connector

10 pin dual row header, Amp #1761610-3

(+5V fused with self-resetting fuse)

| PIN | P17A SIGNAL | PIN | P17B SIGNAL |
|-----|-------------|-----|-------------|
| 1 | +5V-USB2 | 2 | +5V-USB3 |
| 3 | USB2- | 4 | USB3- |
| 5 | USB2+ | 6 | USB3+ |
| 7 | Gnd-USB2 | 8 | Gnd-USB3 |
| 9 | NC | 10 | NC |

Note: P17 odd pins are for USB2 and the even pins are USB3

Connectors (continued)

P7 – Serial Port 1 Connector – RS422/RS485 Full Duplex Connections

10 pin dual row header, Amp #5103308-1

| PIN | SIGNAL | PIN | SIGNAL |
|-----|----------------|-----|----------------|
| 1 | Not applicable | 2 | Not applicable |
| 3 | RX+ | 4 | TX+ |
| 5 | TX- | 6 | RX- |
| 7 | Not applicable | 8 | Not applicable |
| 9 | Gnd | 10 | NC |

Note: See JU2 pin-puts listed in the Jumpers & LEDs section on this document to enable serial port 1 signal connections.

P7 – Serial Port 1 Connector – RS485 Half Duplex Connections

10 pin dual row header, Amp #5103308-1

| PIN | SIGNAL | PIN | SIGNAL |
|-----|----------------|-----|----------------|
| 1 | Not applicable | 2 | Not applicable |
| 3 | Not applicable | 4 | DATA+ |
| 5 | DATA- | 6 | Not applicable |
| 7 | Not applicable | 8 | Not applicable |
| 9 | Gnd | 10 | NC |

Note: See JU2 pin-puts listed in the Jumpers & LEDs section on this document to enable serial port 1 signal connections.

P9 – Dual Universal Serial Bus (USB) 3.0 Connector

19 pin dual row header, Lotes ABA-USB-152-K04 (+5V fused with self-resetting fuse)

| PIN | USB4 SIGNAL | PIN | USB5 SIGNAL |
|-----|-------------|-----|-------------|
| 1 | +5V-USB4 | 11 | USBP5P |
| 2 | USB3_RX5AN | 12 | USBP5N |
| 3 | USB3_RX5AP | 13 | GND |
| 4 | GND | 14 | USB3_TX6BP |
| 5 | USB3_TX5BN | 15 | USB3_TX6BN |
| 6 | USB3_TX5BP | 16 | GND |
| 7 | GND | 17 | USB3_RX6AP |
| 8 | USBP4N | 18 | USB_RX6AN |
| 9 | USBP4P | 19 | +5V-USB5 |
| 10 | ID | | |

P17A, P17B – Universal Serial Bus (USB) 3.0 Connectors (I/O Bracket)

USB vertical connectors, Molex #48404-0003 (+5V fused with self-resetting fuse)

| PIN | P17A SIGNAL | PIN | P17B SIGNAL |
|-----|-------------|-----|-------------|
| 1 | +5V-USB0 | 1 | +5V-USB1 |
| 2 | USB0- | 2 | USB1- |
| 3 | USB0+ | 3 | USB1+ |
| 4 | GND | 4 | GND |
| 5 | USB3_RX1AN | 5 | USB3_RX2AN |
| 6 | USB3_RX1AP | 6 | USB3_RX2AP |
| 7 | GND | 7 | GND |
| 8 | USB3_TX1BN | 8 | USB3_TX2BN |
| 9 | USB3_TX1BP | 9 | USB3_TX2BP |

Note: P17A is USB0 and P17B is USB1

P18 - 10/100/1000Base-T Ethernet Connector – Alternate Backplane LAN Over Cable

8 pin single row connector, Molex #0554500859

| PIN | SIGNAL |
|-----|---------|
| 1 | A_MDI2N |
| 2 | A_MDI2P |
| 3 | A_MDI3N |
| 4 | A_MDI3P |
| 5 | A_MDI1N |
| 6 | A_MDI1P |
| 7 | A_MDI0N |
| 8 | A_MDI0P |

BP LAN Cable Option

You may elect to create your own backplane LAN cable using the mating Molex connector information below. However, Trenton does offer a pre-made alternate backplane LAN cable with the mating Molex connector on one end and an RJ45 connector mounted into an I/O bracket on the other end. The Trenton part number for the alternate backplane LAN cable is: **193500001150-00**.

Note: Using the alternate backplane LAN cable effectively disconnects the LAN routing down to SHB edge connector C.

Note:

The mating Molex connector to use when making this alternative Ethernet cable has a Molex part number of 0513360810.

P27, P28, P31, P32, P35, P36 – SATA II 300 Ports

7 pin vertical locking connector, Molex #67800-8005

| PIN | SIGNAL | PIN | SIGNAL |
|-----|--------|-----|--------|
| 1 | Gnd | 5 | RX- |
| 2 | TX+ | 6 | RX+ |
| 3 | TX- | 7 | Gnd |
| 4 | Gnd | | |

Notes:

1 – P27 = SATA0 interface, P28 = SATA1 interface,
P31 = SATA2 interface, P32 = SATA3 interface,
P35 = SATA4 interface, P36 = SATA5 interface,

Connectors (continued)

P10 – PCI Express Mini Card Connector (SHB bottom side)

Standard 52-pin PCIe mini-card edge connector, JAE
Electronic MM60-52B1-E1-R650

| PIN | SIGNAL | PIN | SIGNAL |
|-----|------------------|-----|---------------|
| 1 | PCH_WAKE# | 2 | VCC3_MINIPCIE |
| 3 | NC | 4 | GND |
| 5 | NC | 6 | VCC1_5_MINIPE |
| 7 | VCC3_MINIPCIE | 8 | NC |
| 9 | GND | 10 | NC |
| 11 | MINIPCIE_CLK100N | 12 | NC |
| 13 | MINIPCIE_CLK100P | 14 | NC |
| 15 | GND | 16 | NC |
| 17 | NC | 18 | GND |
| 19 | NC | 20 | NC |
| 21 | GND | 22 | EXP_RESET# |
| 23 | MINI_PE_RXN0 | 24 | 3.3V AUX |
| 25 | MINI_PE_RXP0 | 26 | GND |
| 27 | GND | 28 | VCC1_5_MINIPE |
| 29 | GND | 30 | SMBCLK_RESUME |
| 31 | MINI_PE_TXN0 | 32 | SMBDAT_RESUME |
| 33 | MINI_PE_TXP0 | 34 | GND |
| 35 | GND | 36 | USBP6- |
| 37 | NC | 38 | USBP6+ |
| 39 | NC | 40 | GND |
| 41 | NC | 42 | NC |
| 43 | NC | 44 | WLAN_LED10 |
| 45 | CLINK_CLK | 46 | NC |
| 47 | CLINK_DAT | 48 | VCC1_5_MINIPE |
| 49 | CLINK_RST# | 50 | GND |
| 51 | NC | 52 | VCC3_MINIPCIE |

- 2 – SATA connectors support standard SATA interface cables
- 3 – P27 & P28 (SATA0 and SATA1 ports) support SATA 3.0, SATA 2.0 and SATA 1.0 devices while all other SATA ports support SATA 2.0 and SATA 1.0 devices
- 4 – SATA 3.0 = 600MB/s data transfers, SATA 2.0 = 300MB/s data transfers and SATA 1.0 = 150MB/s data transfers

P20A - I/O Expansion Mezzanine Card Connector (For IOBxx option modules)

76 pin controlled impedance connector, Samtec #MIS-038-01-FD-K-TR

| PIN | SIGNAL | PIN | SIGNAL |
|-----|----------------|-----|-------------|
| 1 | +12V | 2 | +5V_STANDBY |
| 3 | HDA_SDIN2 | 4 | +5V_STANDBY |
| 5 | HDA_SDIN1 | 6 | +5V_DUAL |
| 7 | HDA_SDIN0 | 8 | +5V_DUAL |
| 9 | HDA_SYNC | 10 | HDA_BITCLK |
| 11 | HDA_SDOUT | 12 | HDA_ACRST |
| 13 | ICH_SMI# | 14 | ICH_RCIN# |
| 15 | ICH_SIOPME# | 16 | ICH_A20GATE |
| 17 | Gnd | 18 | Gnd |
| 19 | L_FRAME# | 20 | L_AD3 |
| 21 | L_DRQ1# | 22 | L_AD2 |
| 23 | L_DRQ0# | 24 | L_AD1 |
| 25 | SERIRQ | 26 | L_AD0 |
| 27 | Gnd | 28 | Gnd |
| 29 | PCLK14SIO | 30 | PCLK33LPC |
| 31 | Gnd | 32 | Gnd |
| 33 | SMBDATA_RESUME | 34 | IPMB_DAT |
| 35 | SMBCLK_RESUME | 36 | IPMB_CLK |
| 37 | SALRT#_RESUME | 38 | IPMB_ALRT# |
| 39 | Gnd | 40 | Gnd |
| 41 | EXP_CLK100 | 42 | EXP_RESET# |
| 43 | EXP_CLK100# | 44 | ICH_WAKE# |
| 45 | Gnd | 46 | Gnd |
| 47 | C_PE_TXP5 | 48 | C_PE_RXP5 |
| 49 | C_PE_TXN5 | 50 | C_PE_RXN5 |
| 51 | Gnd | 52 | Gnd |
| 53 | NC | 54 | NC |
| 55 | NC | 56 | NC |
| 57 | Gnd | 58 | Gnd |
| 59 | NC | 60 | NC |
| 61 | NC | 62 | NC |
| 63 | Gnd | 64 | Gnd |
| 65 | NC | 66 | NC |
| 67 | NC | 68 | NC |
| 69 | Gnd | 70 | Gnd |
| 71 | +3.3V | 72 | +5V |
| 73 | +3.3V | 74 | +5V |
| 75 | +3.3V | 76 | +5V |



P20B - Media Expansion Mezzanine Card Connector
(For MPE40 option module)

76 pin controlled impedance connector, Samtec #MIS-038-01-FD-K-TR

| PIN | SIGNAL | PIN | SIGNAL |
|-----|---------------|-----|---------------|
| 1 | +12V | 2 | +5V_STANDBY |
| 3 | AC_SDIN2_R | 4 | +5V_STANDBY |
| 5 | AC_SDIN1_R | 6 | +5V_AUX |
| 7 | AC_SDIN0_R | 8 | +5V_AUX |
| 9 | AC_SYNC_R | 10 | AC_BITCLK_R |
| 11 | AC_SDOOUT_R | 12 | AC_RST#_R |
| 13 | VCC5_I0B2_DV1 | 14 | NC |
| 15 | VCC5_I0B2_DV1 | 16 | NC |
| 17 | Gnd | 18 | Gnd |
| 19 | DVI_I0B2_TX0P | 20 | DVI_I0B2_TX1P |
| 21 | DVI_I0B2_TX0N | 22 | DVI_I0B2_TX1N |
| 23 | Gnd | 24 | Gnd |
| 25 | DVI_I0B2_TX2P | 26 | DVI_I0B2_TX3P |
| 27 | DVI_I0B2_TX2N | 28 | DVI_I0B2_TX3N |
| 29 | Gnd | 30 | Gnd |
| 31 | DVI_I0B2_HPD | 32 | DVI_I0B2_SCLK |
| 33 | Gnd | 34 | Gnd |
| 35 | DVI_I0B2_SDAT | 36 | VCC3_DP |
| 37 | NC | 38 | VCC3_DP |
| 39 | Gnd | 40 | Gnd |
| 41 | DP_TXP0 | 42 | DP_TXP1 |
| 43 | DP_TXN0 | 44 | DP_TXN1 |
| 45 | Gnd | 46 | Gnd |
| 47 | DP_TXP2 | 48 | DP_TXP3 |
| 49 | DP_TXN2 | 50 | DP_TXN3 |
| 51 | Gnd | 52 | Gnd |
| 53 | DP_AUX_P | 54 | DP_HPDET |
| 55 | DP_AUX_N | 56 | NC |
| 57 | Gnd | 58 | Gnd |
| 59 | NC | 60 | NC |
| 61 | NC | 62 | NC |
| 63 | Gnd | 64 | Gnd |
| 65 | NC | 66 | NC |
| 67 | NC | 68 | NC |
| 69 | Gnd | 70 | Gnd |
| 71 | +3.3V | 72 | +5V |
| 73 | +3.3V | 74 | +5V |
| 75 | +3.3V | 76 | +5V |

Memory

The latest CPU options on the THD8141 feature the 22nm Intel® Micro-architecture (Haswell). These processor options support two, dual-channel DDR3-1600 memory interfaces.

There are four DDR3 DIMM sockets on the board. Total system memory capacity is 32GB when using standard 8GB DDR3 DIMMs and 16GB when using 4GB DIMMs. A peak DDR3 memory interface data transfer rate of 1600 MT/s is supported when using PC3-12800 (i.e. DDR3-1600) DIMMs and the latest available processor option. Populating the DIMM sockets in memory channel pairs will result in better memory bandwidth and faster data transfers. The system BIOS automatically detects memory type, size and speed.

Trenton recommends unbuffered, ECC, PC3-12800, PC3-10600 or PC3-8500 DDR3 memory modules for use on the THD8141. These unbuffered ECC registered (64-bit) DDR3 DIMMs must be PC3-12800, PC3-10600 or PC3-8500 compliant. Unbuffered non-ECC DDR3 DIMMs are also supported on the THD8141 SHB, but you cannot mix the two different memory types on the same board.

The SHB uses industry standard gold finger standard DIMM memory modules, which must be PC3-12800, PC3-10600 or PC3-8500 compliant and have the following features:

- Gold-plated contacts
- ECC registered (64-bit) DDR3 memory
- 240-pin

The following DIMM sizes are supported:

| MT/s | DIMM Type | Rank | DRAM Component Density | DIMM Module Capacities |
|------|-----------|----------------|------------------------|------------------------|
| 1600 | PC3-12800 | Single or Dual | 1GB, 2GB, 4GB | 1GB, 2GB, 4GB, 8GB |
| 1333 | PC3-10600 | Single or Dual | 1GB, 2GB, 4GB | 1GB, 2GB, 4GB, 8GB |
| 1066 | PC3-8500 | Single or Dual | 1GB, 2GB, 4GB | 1GB, 2GB, 4GB, 8GB |

NOTE 1: To maximize memory interface speed, populate each memory channel with DDR3 DIMMs having the same interface speed. The SHB will support DIMMs with different speeds, but the memory channel interface will operate speed of the slowest DIMM.

NOTE 2: The SHB supports the following memory module memory latency timings:

- 7-7-7 and 8-8-8 for 1066MHz DDR3 DIMMs
- 9-9-9 for 1333MHz DDR3 DIMMs
- 11-11-11 for 1600MHz DDR3 DIMMs

NOTE 3: Populate the memory sockets starting with memory channel A and begin by using the DIMM socket closest to the CPU first. Refer to the THD8141 board layout drawing and populate the memory sockets using the population order illustrated in the chart below:

| Population order | CPU1 |
|------------------|------|
| 1 | BK0A |
| 2 | BK1A |
| 3 | BK0B |
| 4 | BK1B |

[THD8141 Product Detail](#)