



## OPERATOR'S GUIDE

### AccuDry

Standardised Tumble Dryer

With **NEW Intuitive  
Touchscreen User Interface**

Covering Serial Numbers  
1717/17/1001 & upwards

James H. Heal & Co. Ltd.  
Halifax, England

Setting the Standard



THE QUEEN'S AWARDS  
FOR ENTERPRISE:  
INTERNATIONAL TRADE  
2012

Publication 290-1717-1\$E  
© 2017

Published by:

JAMES HEAL LTD.  
RICHMOND WORKS  
HALIFAX  
WEST YORKSHIRE  
HX3 6EP  
ENGLAND

TELEPHONE +44 (0) 1422 366355  
FACSIMILE +44 (0) 1422 352440

E-mail [info@james-heal.co.uk](mailto:info@james-heal.co.uk)  
Internet <http://www.james-heal.co.uk>

© 2017

# TABLE OF CONTENTS

JAMES HEAL .....	4
Setting the Standard .....	4
Areas of Expertise .....	4
Introduction .....	5
AccuDry Standardised Tumble Dryer .....	5
Key Features.....	5
Service & Calibration.....	5
Technical Assistance .....	5
Standards .....	6
About AccuDry.....	6
Health & Safety.....	7
Lint .....	8
Cleaning the Filter .....	8
Installation .....	9
Unpacking.....	9
Standard Accessories .....	9
Optional Accessories.....	9
Levelling .....	10
Venting .....	11
Electrical Connection .....	12
Fuses.....	12
The Essential Features of ACCUDRY .....	13
Intuitive Touchscreen User Interface.....	14
Technical Data .....	17
Exhaust Temperature .....	18
Method 1 - Rear exhaust check .....	19
Method 2 - Front exhaust check .....	20
EU Conformity .....	21
Service & Calibration .....	21
Revision History.....	22

# JAMES HEAL

At James Heal, we are dedicated to designing and developing high precision testing instruments and test materials for physical and colour fastness testing. Our worldwide Service and Calibration division and expert technical assistance complement our product range, adding real value to your laboratory testing activities.

## Setting the Standard

We are committed to forming close relationships and have established numerous partnerships within the textile industry, from trade and standards organizations, to test houses, customers and distribution partners.

With a heritage spanning more than 140 years, we have evolved and grown through a culture of continuous improvement, resulting in a thorough understanding of the applications, operating conditions and requirements of customers worldwide - from independent testing Laboratories and test houses, to fabric suppliers, manufacturers and retailers.

Using knowledge and expertise, we consistently set the industry standard through product innovation and technology, with customer and user needs, present and future, driving our technological advancements. You can be assured that with James Heal, you will always receive the highest levels of product quality and customer service. We have Agents and Distribution partners all over the globe, ensuring locally available product whenever, and wherever you need it.

## Areas of Expertise

### Textile: Colour Fastness

- Chlorinated Water
- Dry Cleaning
- Dry Heat
- Hot Pressing
- Laundering
- Light
- Perspiration
- Phenolic Yellowing
- Print Durability
- Rubbing
- Washing
- Water

### Textile: Physical

- Abrasion
- Bursting Strength
- Compression and Puncture
- Crease and Wrinkle Recovery
- Crimp
- Drape
- Durability
- Flammability
- Mass per unit area
- Pilling and Fuzzing
- Security of Attachments
- Seam Slippage
- Shrinkage
- Snagging
- Spray Rating
- Stretch and Recovery
- Surface Deterioration
- Tear Strength
- Tensile Strength
- Washing and Drying

### Non-Textile

- Bursting strength of nonwovens, plastics, paper and medical products
- Micro-scratching of laminates, wooden, painted, automotive and high gloss surfaces
- Physical and colour fastness testing of leather
- Rubbing fastness of laminates and wooden surfaces
- Tear strength of paper and plastics

# INTRODUCTION

## AccuDry Standardised Tumble Dryer

AccuDry has been designed with James Heal's unique product signature and has been produced completely with the user in mind. We have combined James Heal's technical and performance expertise, with intuitive design and operation to produce the most ergonomic and user friendly instrument.

## Key Features

- Sleek, ergonomic design
- Featuring the new touchscreen user interface for incredible ease of use
- 50/60 Hz compatible

## Service & Calibration

- Worldwide Service
- ISO 17025 based Calibration Service
- 18 Months' Warranty

## Technical Assistance

- Operator Training
- Knowledge Transfer
- Applications Support
- Engineering Support

## Standards

- ISO 6330 edition 3
- M&S PG01
- Woolmark

## About AccuDry

AccuDry is an air-vented, *Standardised* Tumble Dryer

AccuDry is engineered for laboratory stability tests. It is designed to reduce *machine variables* and *operator error* to the absolute minimum.

The instrument is equipped with James Heals intuitive touchscreen user interface.


All relevant values are displayed continuously throughout the drying cycle.

Opening the tumble dryer door interrupts the cycle and allows the operator to make an interim examination of the load. Closing the door and pressing START allows the cycle to continue from the same point.

At the end of the pre-set cycle time, a chime sounds to alert the operator.

## HEALTH & SAFETY

- Read this manual carefully before operating the instrument.
- **AccuDry** has a mass of approximately 40kg, therefore assistance from a colleague or suitable lifting apparatus is recommended.
- **AccuDry** complies with the EU regulations in full.
- Ensure the instrument is isolated from the electrical supply before removing any covers. Covers should only be removed by a qualified Engineer or Electrician.
- Have the instrument serviced and calibrated at least once a year by a James Heal Service and Calibration Engineer.
- **AccuDry** is designed to be vented through to the open air. It should have its own ventilation system which should not be joined with any other ventilation system or connected to any other appliance.
- Care must be taken to ensure that the instrument does not stand on the electrical supply cable
- Never tumble dry: rubber, foam rubber, plastic, plastic foam, nappy pants or liners, polythene, paper, dry cleaned garments, large or very bulky items including duvets and sleeping bags. Items not recommended for tumble drying may be marked with a symbol such as:



## Lint

Accumulated lint in the dryer can become a fire hazard, it also reduces the efficiency of the dryer by causing longer drying times and increased power consumption.

- Clean the lint filter before every use.
- Ensure the area around the dryer is clear of lint.
- At regular intervals have the *interior* of the dryer casing cleaned of any accumulated lint. For electrical safety, this must be done by a suitably qualified person or a James Heal Service & Calibration Engineer.


## Cleaning the Filter

To reduce the risk of fires, it is important to check and clean the lint filter regularly, as the lint produced in the drying process can become a fire hazard if it is allowed to accumulate in or around your tumble dryer.

**AccuDry** will only function correctly if the filter is clean. The filter collects all the lint which accumulates during drying and they must therefore be cleaned at the end of each drying cycle. Always replace the filter after cleaning.



Take the filter out of the dryer.

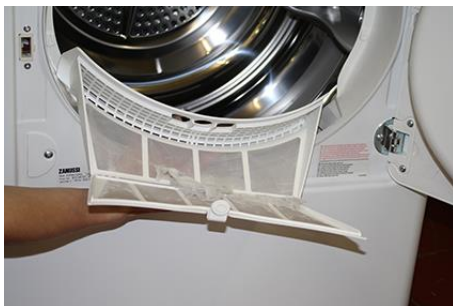

Remove the lint in the filter.



Place the filter back in the dryer.



## INSTALLATION

AccuDry is delivered on a wooden pallet. Use a forklift truck or hydraulic pump trolley to move the packing case as near as possible to the final location. Once in position, follow the instructions in the Unpacking Section to remove the outer case.

AccuDry can now be lifted from its pallet and in to location using a pump truck if available, or a by hand. If lifting by hand a minimum of 2 people will be required.

These instruments are heavy and should be moved with care.

### Unpacking

- Remove the tape from the packing case lid and open.
- Carefully remove the packaging and contents from the packing case.
- Remove the sleeve and then very carefully lift the instrument and place it on a firm flat surface.
- Do not dispose of any packaging material until all standard and optional accessories ordered are fully accounted for. If there are any discrepancies, please contact your supplier immediately.
- Please check the serial number plate to confirm that the supply voltage and frequency are in accordance with your order.


<b>Standard Accessories</b>	<b>Quantity</b>	<b>Stock code</b>
AccuDry - Model 1717	1	902-508
Venting hose	1	N/A
CD Operator's guide	1	297-043
IEC C19/C20 plug set	1	142-357

<b>Optional Accessories</b>	<b>Quantity</b>	<b>Stock code</b>
UKAS Certificate of Calibration	1	202-417
Range of detergents	Please enquire	
Range of ballast / makeweights	Please enquire	


## Levelling

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. The machine must be perfectly level to ensure safe and proper operation.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the two adjustable feet at the front of the machine until it is.

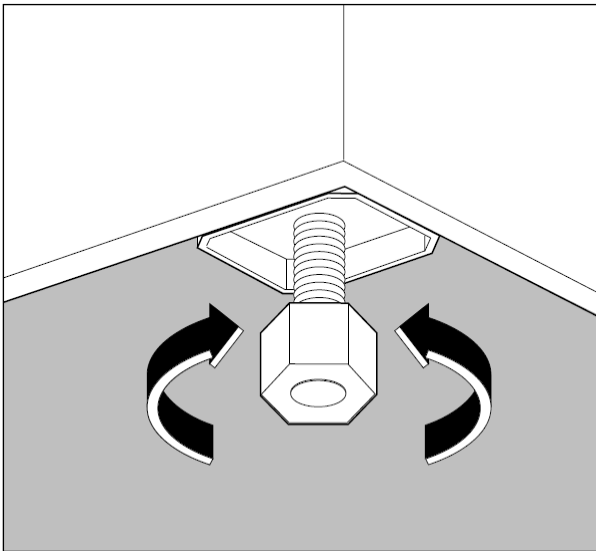

**Figure 1: Adjust the levelling feet**

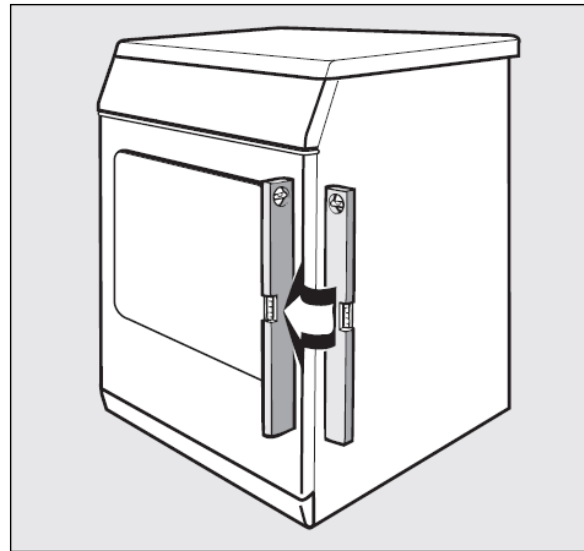

**Figure 2: Checking with spirit level**

The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

## Venting

To simplify the installation, there is a choice of vent outlets: one at the back, the others in the left and right-hand side. Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, screwing it on to the hose and pushing it firmly back into place. The unused vents should be sealed with the special snap covers provided.

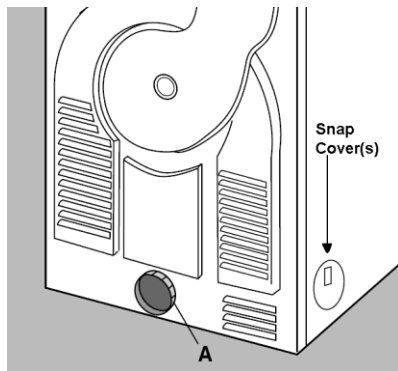


Figure 3: Vent ring nut

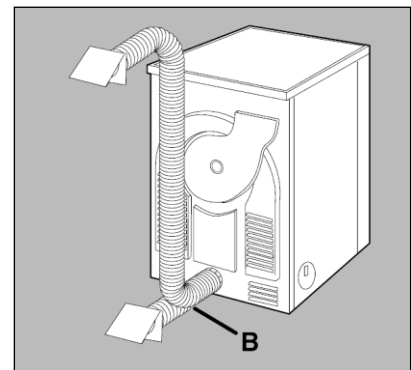
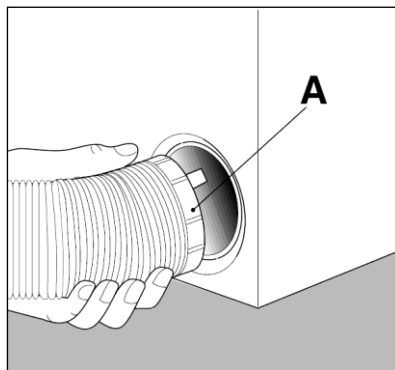


Figure 4: Draining hole

The exhaust air must not be vented into a chimney or vent flue which is in use, nor should it be connected to ducting which ventilates rooms with fuel burning appliances.

If the hose is long and the room temperature low, moisture may condense to water inside the hose. To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (approximate diameter 3 mm) in the lowest point of the hose and to place a small collecting container below it. (See figure 4, point B).

Once connected to the dryer, run the vent hose to the desired outlet point, ensuring that the overall length is less than 2 metres, and that it contains no more than two (2) bends.

In order to prevent the tumble dryer from overheating, it is important that the exhaust is unobstructed. Therefore, in case of a permanent hose fitted to an exterior wall, it must be ensured an exhaust capacity of at least 150m<sup>3</sup>/h.

Ensure that the vent hose is not obstructed or compressed. If the hose is partially obstructed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption. If the hose is completely obstructed, the safety cut-outs within the machine may operate.

## Electrical Connection

Connect the electrical power supply to the mains input using the lead provided.

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

**The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the serial number label on the tumble dryer.


The appliance is supplied with a removable UK 13 Amp plug. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1362) fuse must be used.

The appliance is also supplied with Standard euro & standard Chinese removable plug, these are non-fused.


## Fuses

To replace the fuse contact a James Heal Service & Calibration engineer.

# THE ESSENTIAL FEATURES OF ACCUDRY

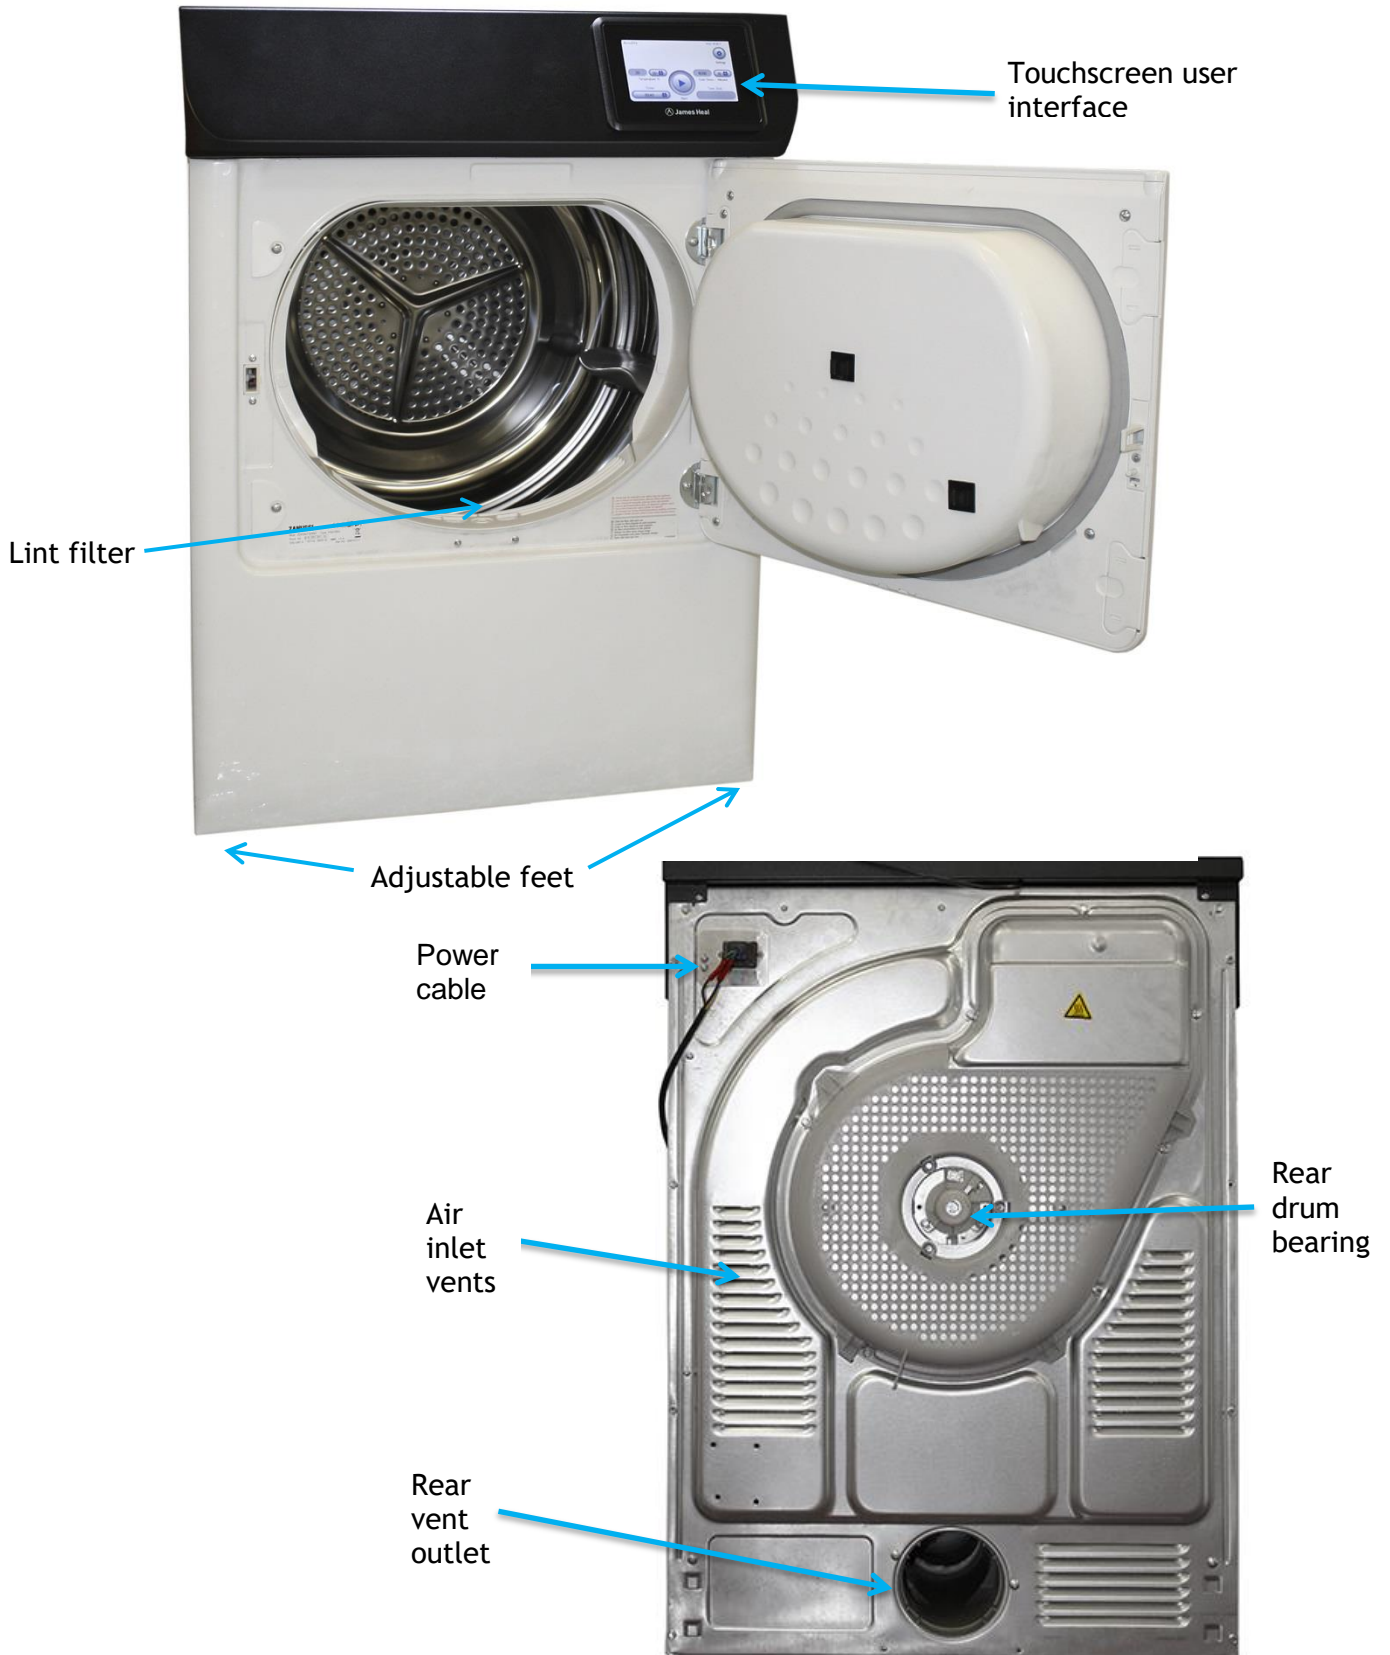

# INTUITIVE TOUCHSCREEN USER INTERFACE

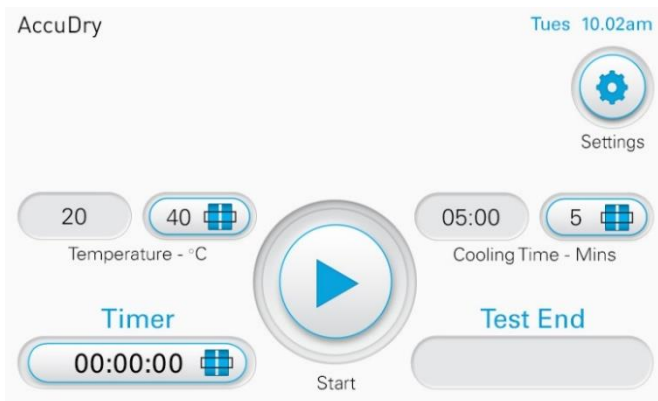


AccuDry Home Screen



## Settings

The following can be changed in general settings:


- Temperature Units - °C or °F
- Volume
- Brightness
- Languages - English, French, German, Spanish Italian, Turkish, Chinese, Hindi
- Day and time

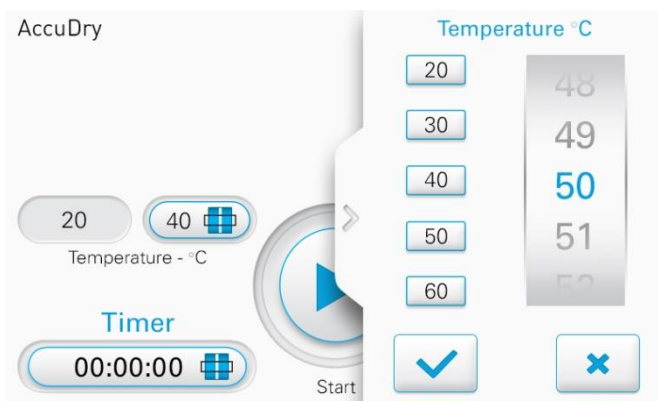

## Setting the Temperature

To set the temperature, press on the temperature button scroll wheel, this brings out the set up tab. Select the required temperature and press the tick button.

Alternatively, select a pre-set value. To save a new value, select the required temperature in the scroll wheel, then press and hold the chosen preset button. The temperature range is from 20°C to 65°C.

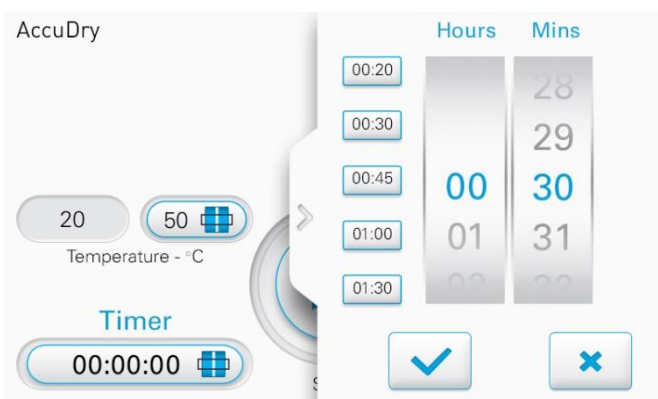


## Setting the Timer

To set the timer for the heating period, press the timer button and the scroll wheel set up tab will appear. Set the required time and then press the tick.

Alternatively, select a pre-set value. To save a new value, select the required time in the scroll wheels, then press and hold the chosen preset button.


The maximum time that can be set is 2 hours 59 minutes.

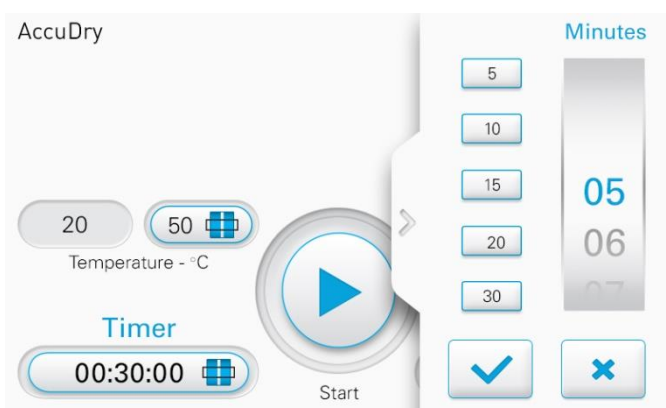

### Setting the Cooling Down Timer


To set the cooling down timer, press the cooling time scroll wheel and the set up tab will appear. Set the required time and then press the tick. Alternatively, select a pre-set value. To save a new value, select the required time in the scroll wheels, then press and hold the chosen preset button.

The minimum time that can be set is 5 minutes, and the maximum is 30 minutes.

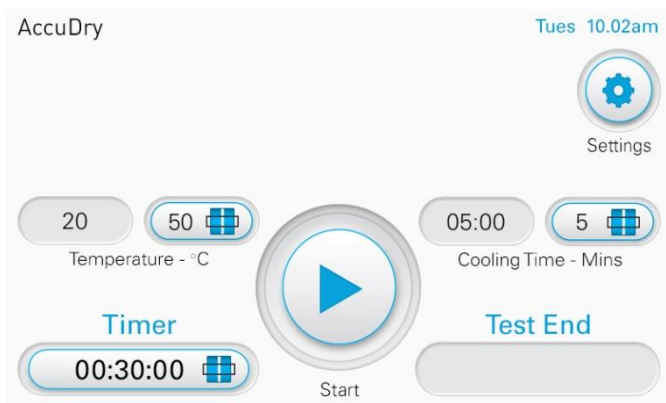

### Test Generated

Once the test is set up with a temperature, and separate heating and cooling times, press the start button to start the test.

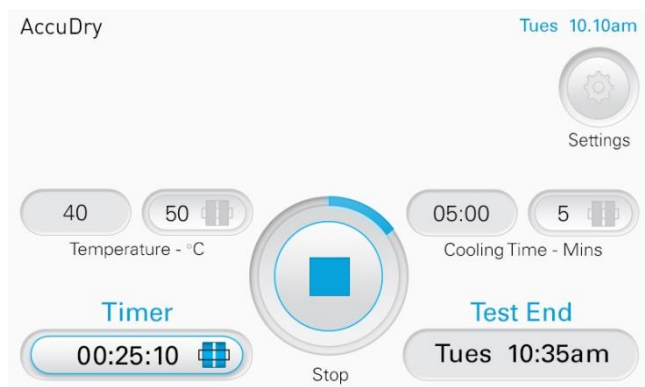

### Test in Progress

Whilst the test is running:

Timer will count down the heating period

Test End will display the time that the combined heating and cooling times will complete


The progress ring will display the combined progress of the heating and cooling times

The buttons and toggle switches will be inactive and greyed out

The test can be paused at any time by opening the door.

If the stop button is pressed whilst the test is in progress, the test will reset.



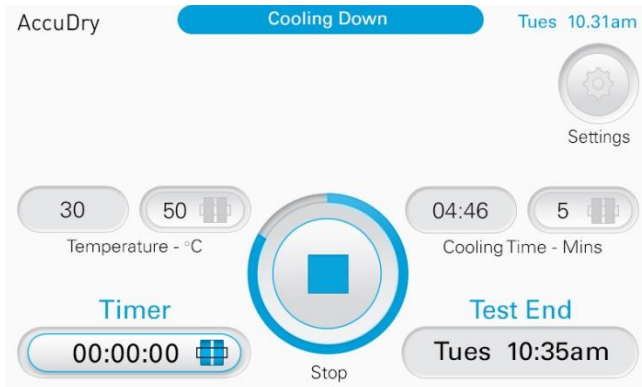

## Cooling Down

Once the heating time has finished:

Timer will display 00:00:00


The heater will turn off and the cooling timer counts down

The progress ring will continue

A 'Cooling Down' message appears at the top of the screen

The Test End continues to display the time that the test will complete

The buttons and toggle switches continue to be inactive and greyed out

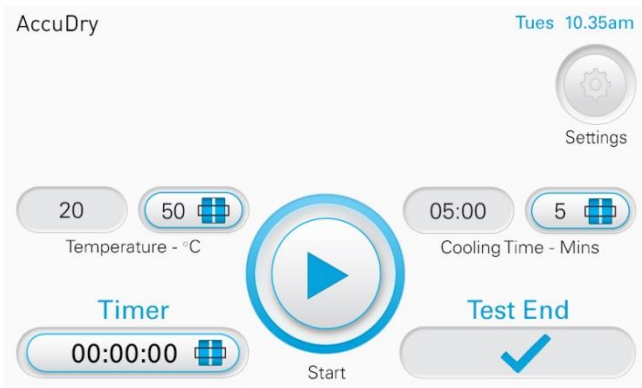

## Test End

Once the cooling time has finished:

Test End display will show a tick

The progress ring will be complete

The end chime will sound

Once the test has been stopped, the buttons and toggle switches will be live once again.



## TECHNICAL DATA

Dimensions, excluding packaging	Height Width Depth	850 mm 600 mm 625 mm
Mass	Net	40 kg
Power supply voltage Total power adsorbed		Single Phase 230V $\pm$ 10%, 50/60 Hz 2600 W (13A)
Power consumption	Maximum	4.25 kWh
Maximum recommended load	Cellulosic Synthetic	6.0 kg 2.5 kg
Drum reversal		Non-reversing
Drum	Diameter Depth Volume	580 mm 410 mm 108 litres
Peripheral centrifugal acceleration		0.75g
Rotational velocity		52 rpm
Lifting vanes	Number Spacing Dimensions Length Width - base Width - peak Height	3 120° 300 mm 40 mm 15 mm 75 mm
Temperature settings	Minimum	20 °C
	Maximum	65 °C
Heating period	Maximum	2 hours 59 minutes
Cool down period	Minimum	5 minutes
	Maximum	30 minutes
Ambient temperature	Minimum	5 °C
	Maximum	35 °C
Warranty	18 months	
Life expectancy	12000 hours usage subject to a service at least every 12 months	

## EXHAUST TEMPERATURE

AccuDry measures the temperature of the exhaust air using a “T” type thermocouple which is located just below the drum filter. It can be identified as a twisted pair of wires: one brown, the other white.

- DO NOT adjust the position of the thermocouple unless instructed to do so by a HEALINK Support Engineer.
- NEVER reduce the length of the thermocouple wire.

To verify the exhaust temperature select one of the methods described below. Method 1 measures the air temperature close to the exit of the exhaust. Method 2 is used to verify the air temperature close to the drum. Note: there may be a difference in temperature of approximately 10°C.



Figure 5: Digital thermometer reading

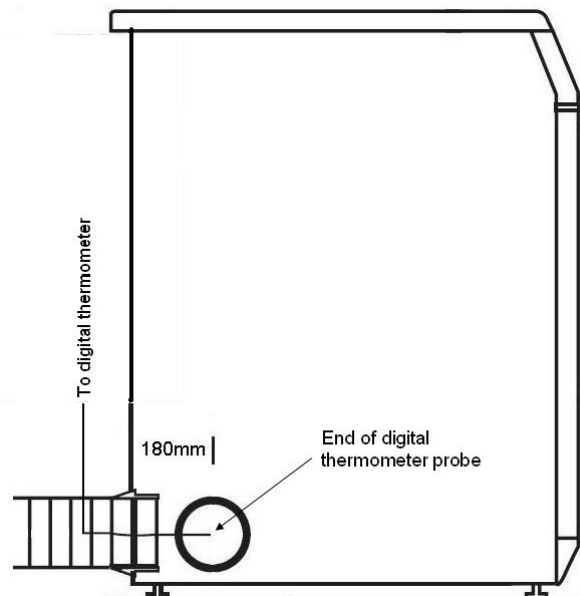


Figure 6: Rear exhaust check

## Method 1 - Rear exhaust check

- Ensure **AccuDry** is correctly installed before continuing with the following steps.
- Position a digital thermometer probe 180mm *into* the exhaust vent (see Figure 6, above). The thermocouple or probe must not come into contact with the exhaust ducting. The digital thermometer probe should remain in this position throughout the test.
  - *Note: use the vent position (rear or side) which is currently in use.*
- Set the **AccuDry** heating time to 60 minutes and the temperature to Maximum.
- Take a 1kg load (20 x 50g pieces) of dry polyester makeweights (ballast).
- Wet out in the Wascator using ISO 6330 wash programme 4A.
- Immediately transfer the load to the **AccuDry** Tumble Dryer and close the door.

*Note: only the rinses and final spin are required.*

*Note: some Retailers may specify other wash programmes.*

- Start the test using the intuitive touchscreen user interface.
- At 25 MINUTES, note the exhaust temperature reading of the digital thermometer.

*Note: some digital thermometers have a “hold” feature which is useful for temporarily “freezing” the display.*

- To finish off, remove the digital thermometer probe from the exhaust venting. If the probe was inserted through the flexible PVC venting, patch the hole with PVC insulating tape.

## Method 2 - Front exhaust check

This method is used to verify the temperature measured and displayed by **AccuDry** by comparing the reading with an independent digital thermometer placed near the fixed “T” type thermocouple.



- Ensure **AccuDry** is correctly installed before continuing with the following steps.
- Remove the filter and insert the probe of the digital thermometer close to the fixed thermocouple. The two (2) probes should be close but not touching each other. If necessary, fix into position using PVC insulating tape.
- Wait 30 minutes to allow the equipment to stabilise.
- With the digital thermometer remaining in position, carefully replace the drum filter. Carefully close the door.
- Set the **AccuDry** heating / cooling times and the temperature as required.
- Press **START** on the touchscreen user interface.
- Take comparative readings at convenient times throughout the heating cycle.
- When the drying cycle has completed, carefully remove the digital thermometer.

Alternative methods of temperature measurement are also available. For example, it is possible to fix self-adhesive “temperature recording strips” to the load or part of the drum. Temperature recording strips indicate the maximum temperature achieved throughout the heating period. Note: there will be variation between these measurements which are *surface temperature* measurements, and the *exhaust air temperature* measurements described above.



Stock Code	Description
789-541	Range A 40° - 71°C - per pack (10)
789-542	Range B 77° - 116°C - per pack (10) (illustrated)

**Figure 7: Temperature recording strips**

## EU CONFORMITY

- Machinery Directive 2006/42/EC
- Low Voltage Directive (LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Waste Electrical and Electronic Equipment recycling (WEEE) Directive 2012/19/EU
- Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU

## SERVICE & CALIBRATION

James Heal Service & Calibration is a totally comprehensive, worldwide support programme.

When you buy instrumentation from us, it is the beginning rather than the end of an association.

Our aim is simple:

To provide precisely the services you need to maintain and protect the value of your investment.

For any enquires you may have regarding your instrument please contact James Heal Service & Calibration by e-mail, phone or fax.

In all communications please quote the serial number of your instrument and the software version number, for example 1717/17/1001 and V1.00.

James Heal Service & Calibration contact details:

E-mail [support@james-heal.co.uk](mailto:support@james-heal.co.uk)

Telephone +44 (0) 1422 366355

Fax +44 (0) 1422 352440

## REVISION HISTORY

See front cover for publication number, e.g., 290-1717-1&A

Revision	Date	Originator	Details Of Revision
A	28/03/2017	CB	New Operator's Guide
B	10/05/2019	SEW	Table & Pic Revision
C	15/07/2019	SEW	Drying time amendment p17
D	25/07/2019	SEW	Fuse amendment p12
E	27/09/19	SEW	Drying temperatures updated